

# Instructions & Design provided by:

Anleitung & Design erstellt von:

# Ron\_McPhatty

## Rebrickable



[https://rebrickable.com/users/ron\\_mcphatty/mocs/](https://rebrickable.com/users/ron_mcphatty/mocs/)


## Instagram



[https://www.instagram.com/ron\\_mcphatty/?hl=de](https://www.instagram.com/ron_mcphatty/?hl=de)

Expansion packs brought to you by:



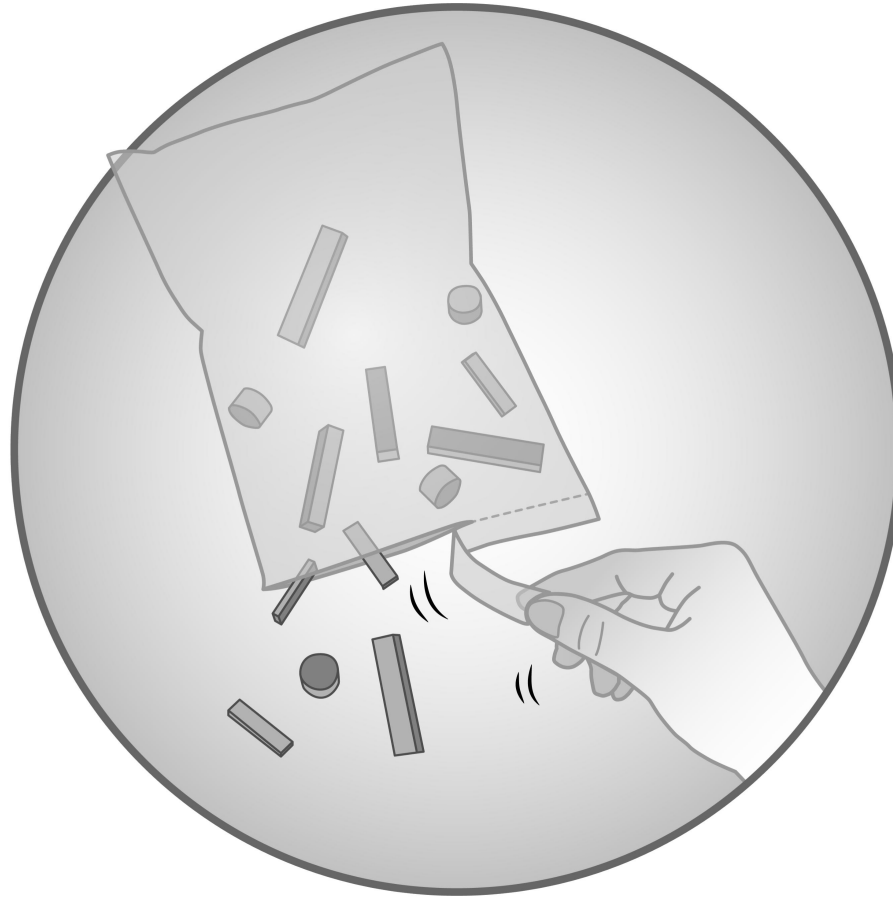

# R2-D2

## ASTROMECH


75379 MOD  
INSTRUCTIONS BY  
RON\_MCPHATTY





# 1


For this modification of  
set 75379 you will need  
the following extra pieces

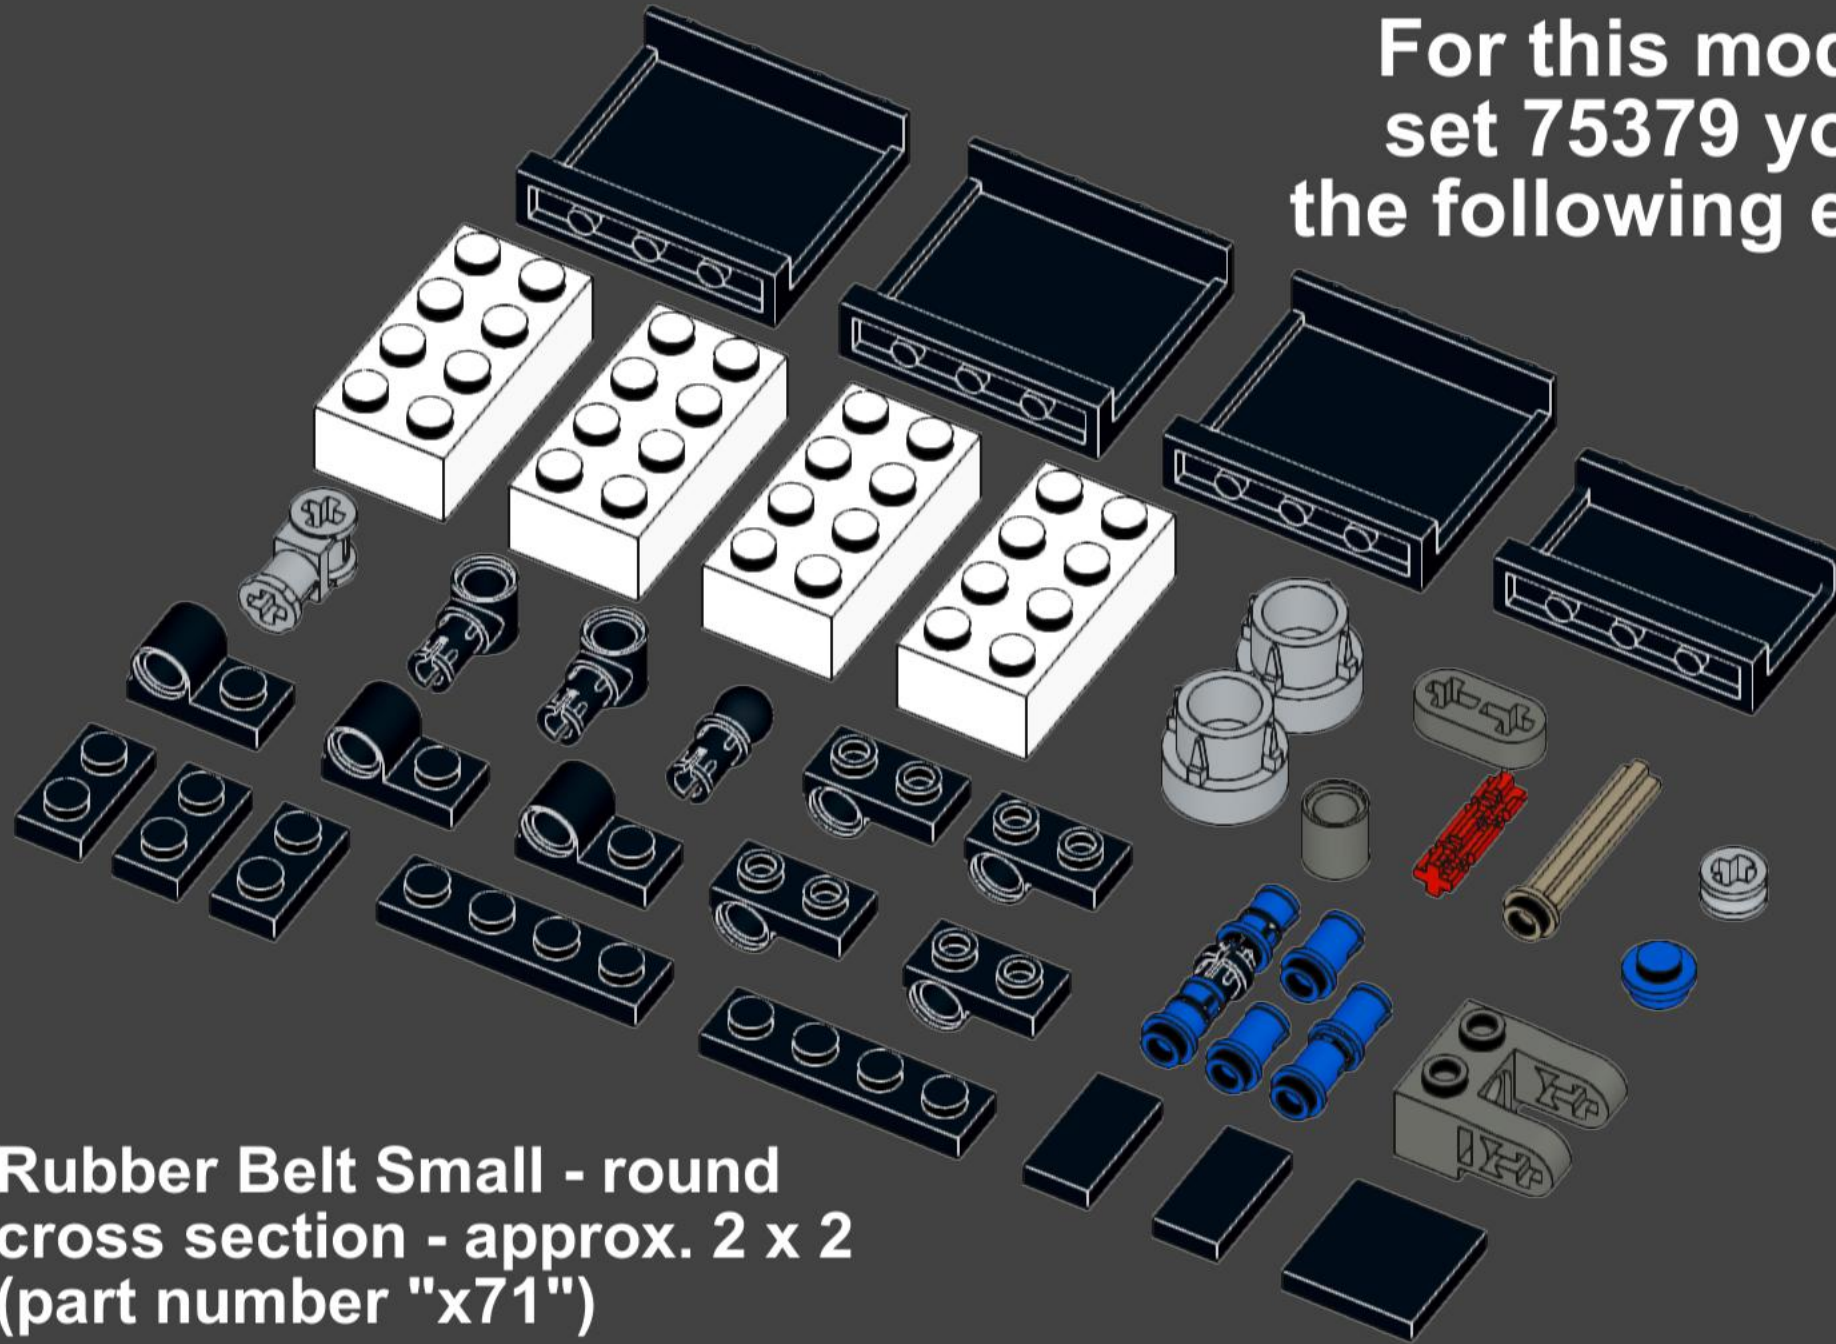

# 2

Remove R2's head,  
legs and body panels.  
Keep them assembled.

Disassemble the  
central frame  
(steps 1-38 of the  
original set)

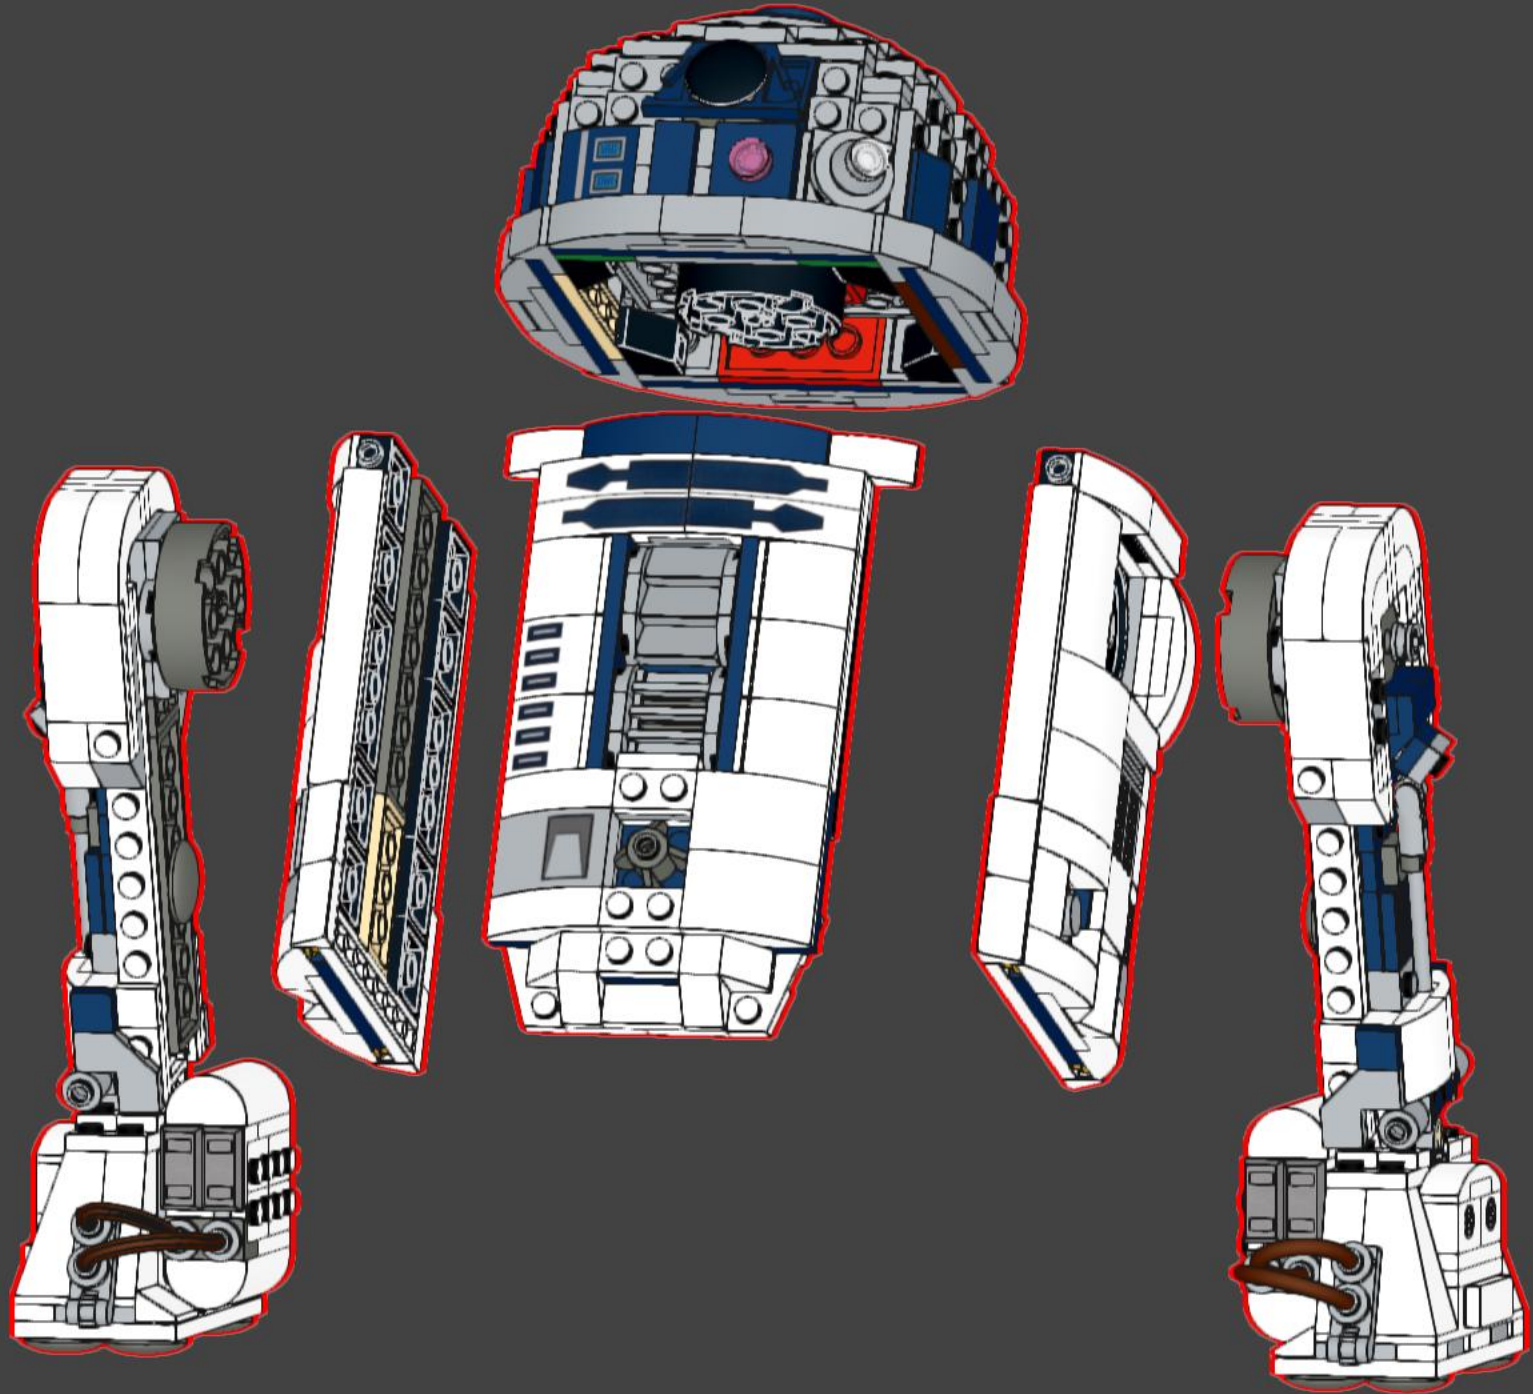




# 3



From the back panel  
remove the two Red Plates  
and one of the Light Grey  
2x6 Plates.

Add two White 1x8 Plates  
(from the disassembled  
central frame).



Remove one White 2x3  
Plate and move the other  
to the centre.

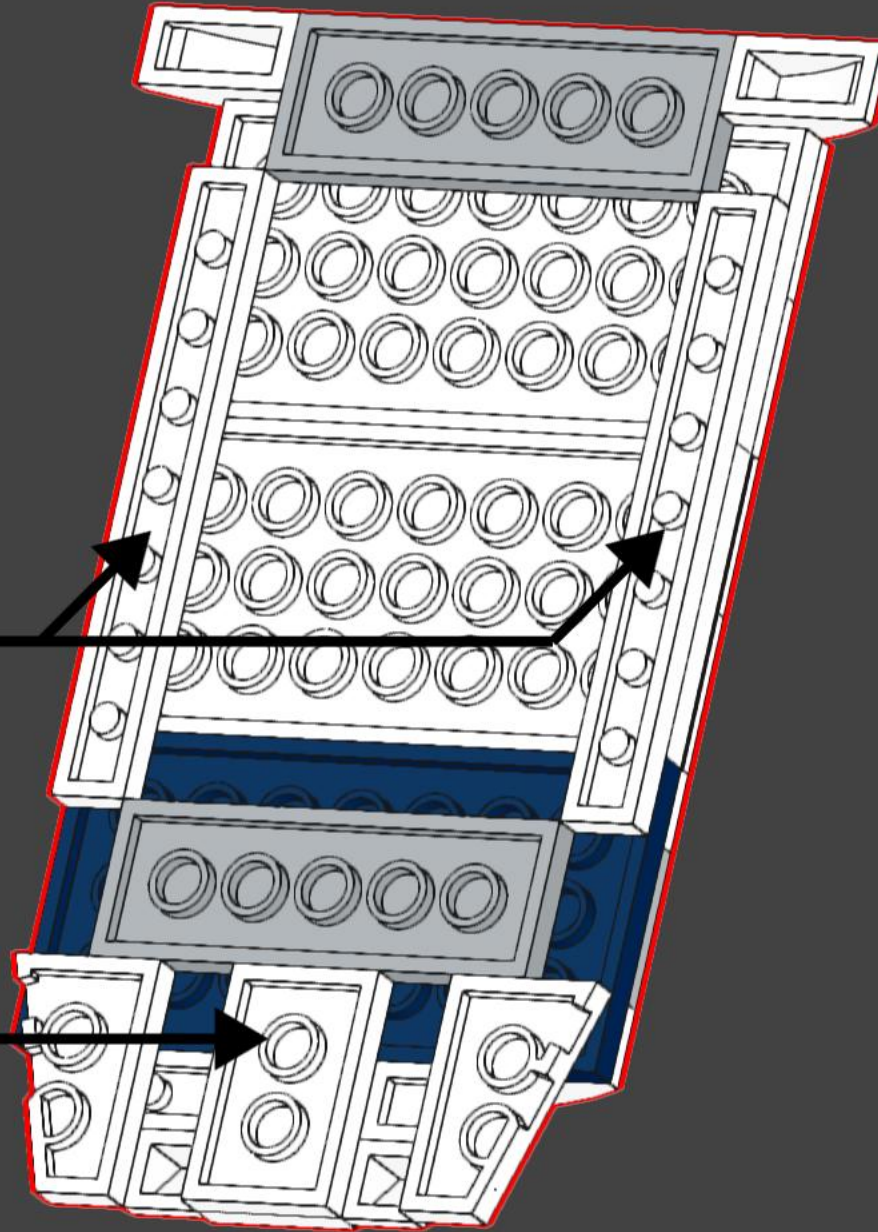



# 4

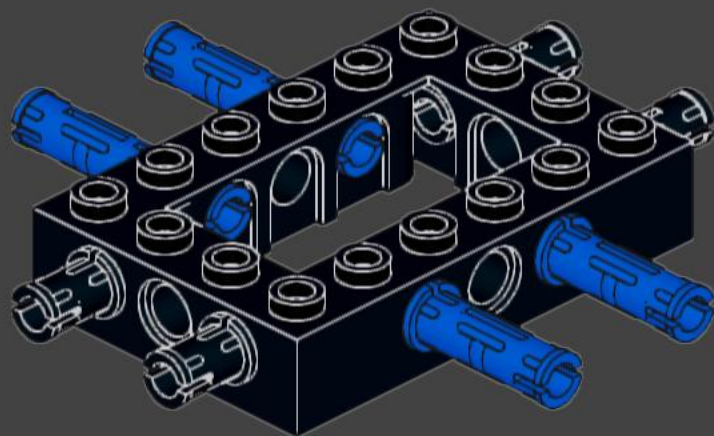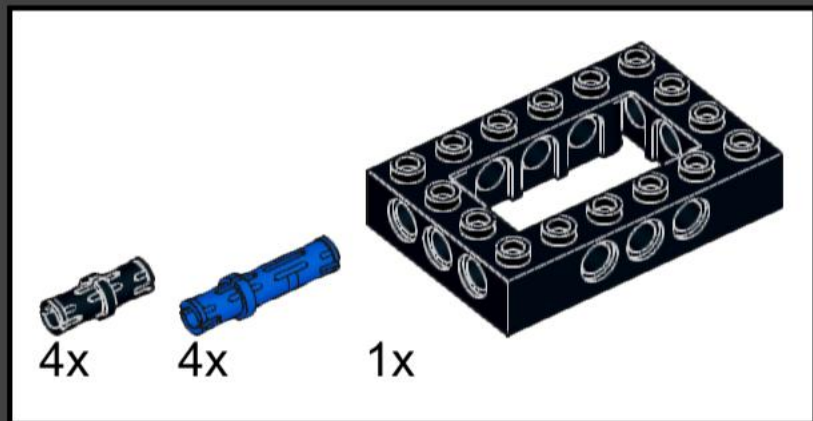



# 5

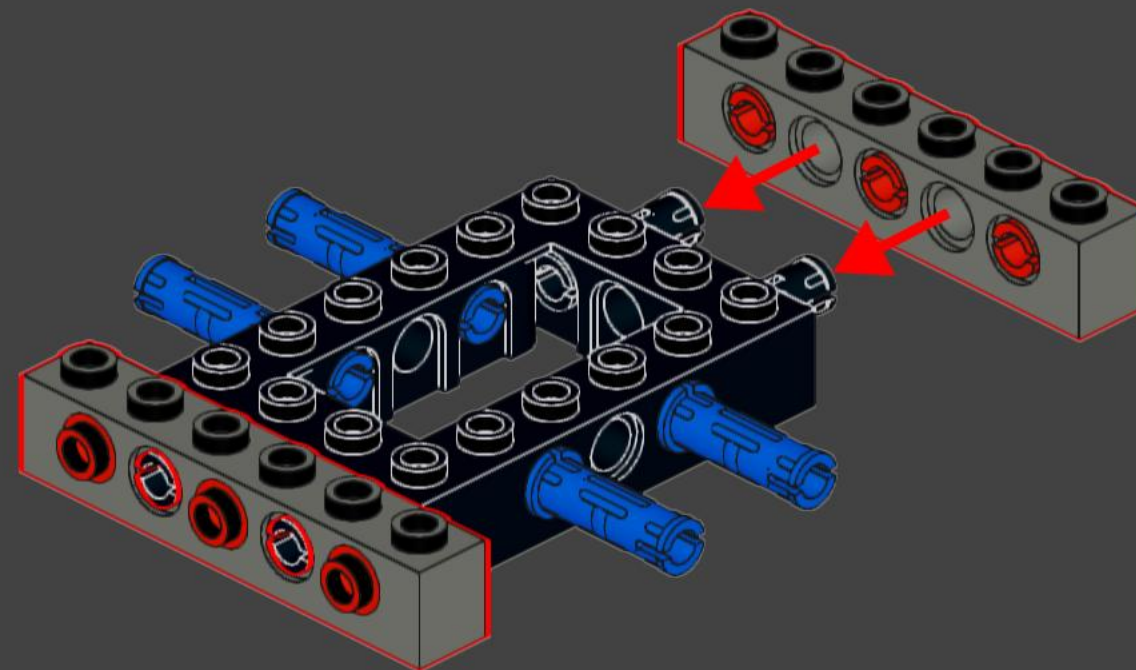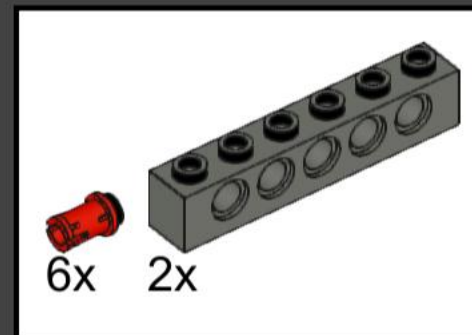

6

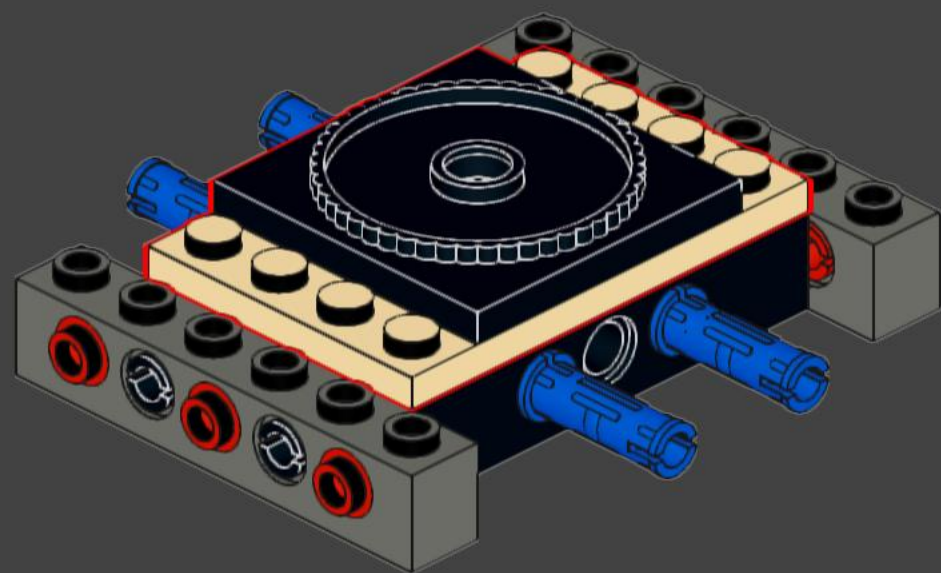
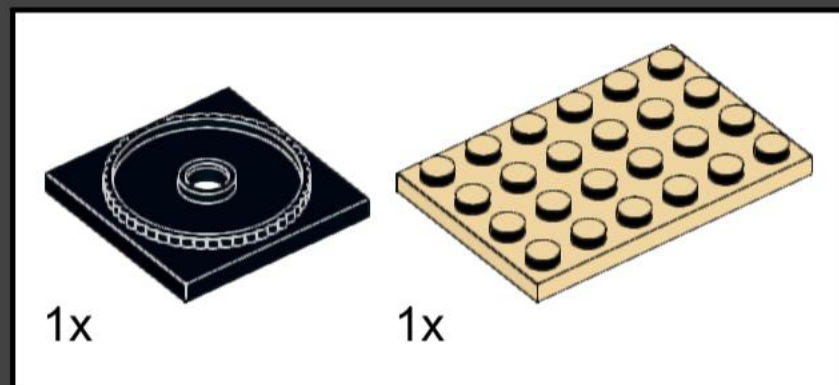


7

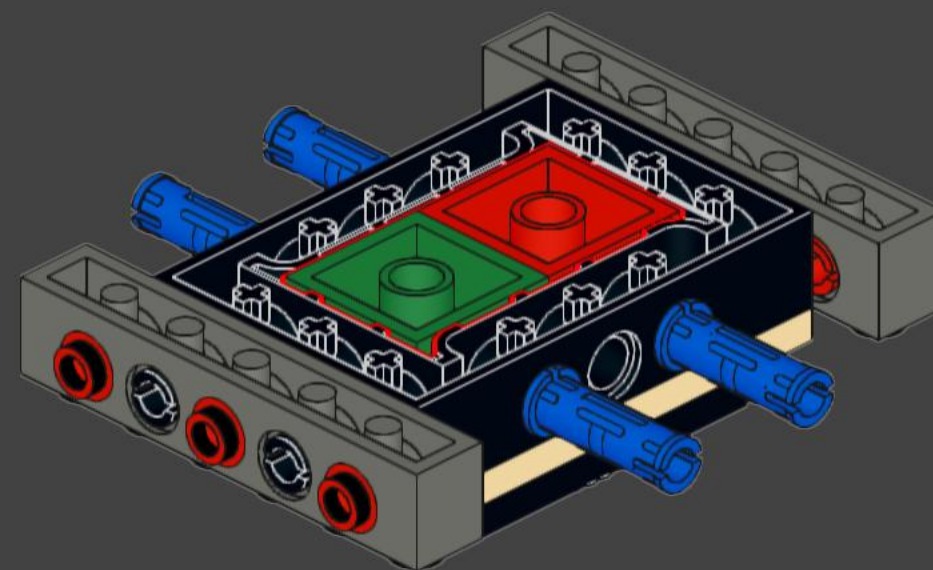
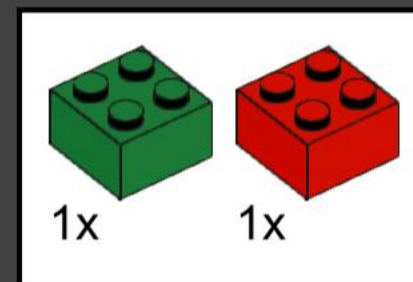






8

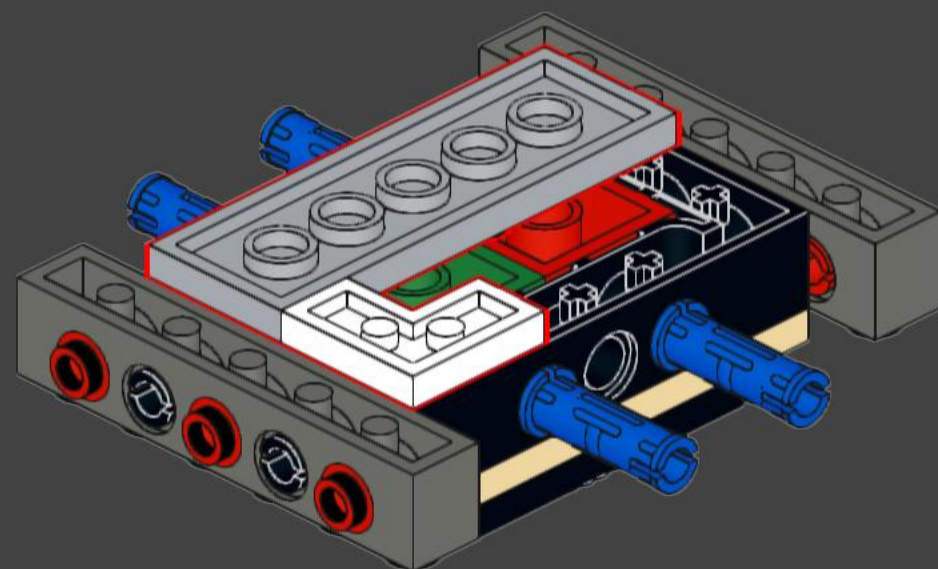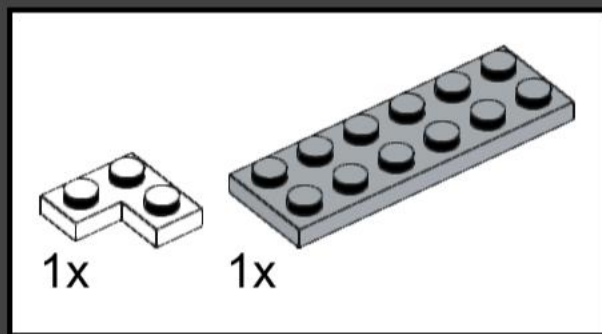



9

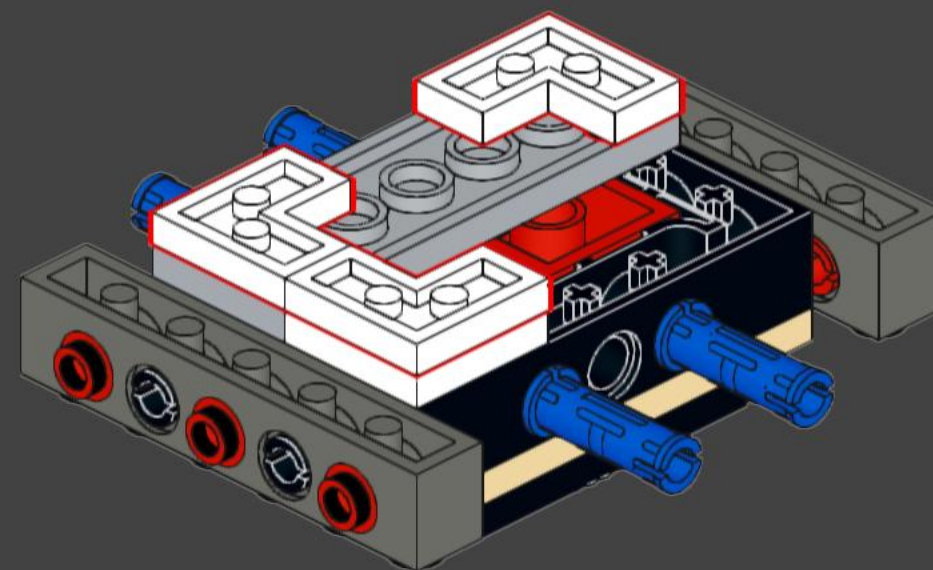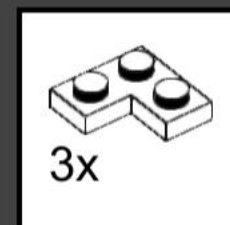

# 10

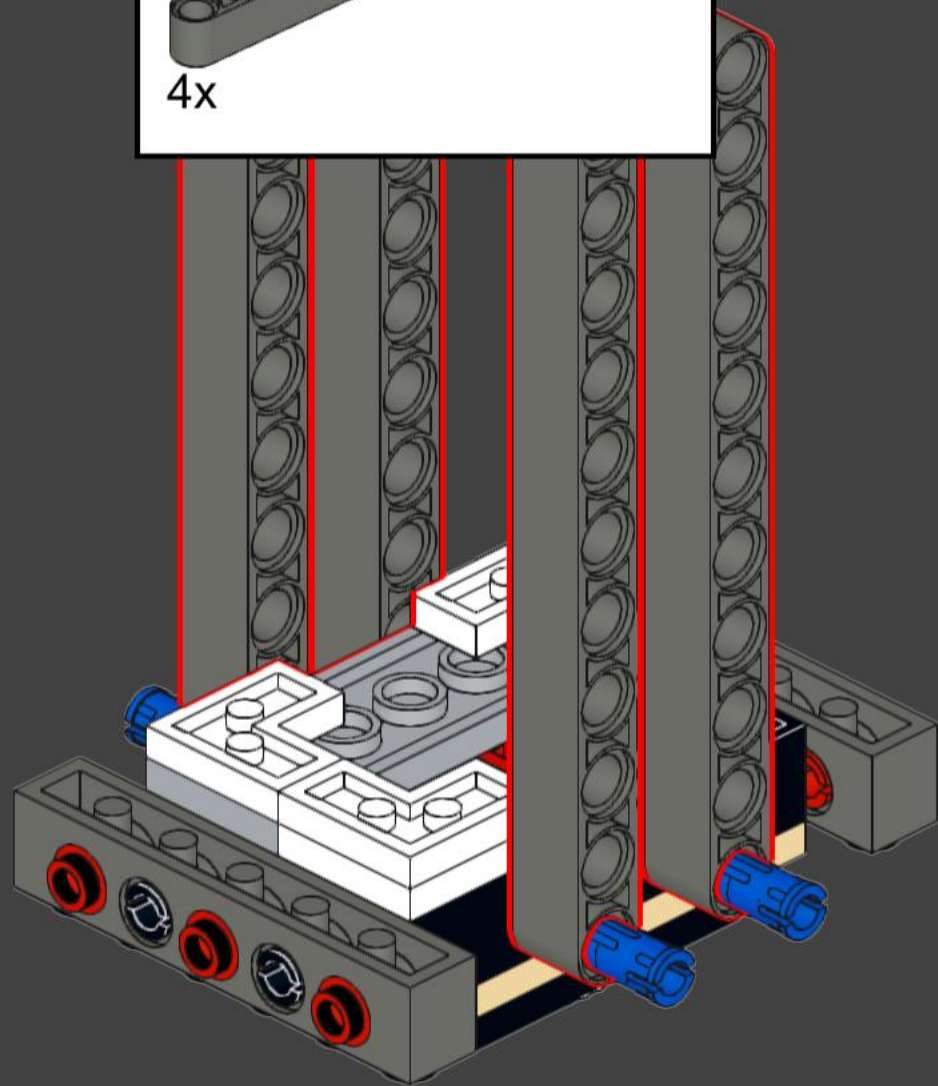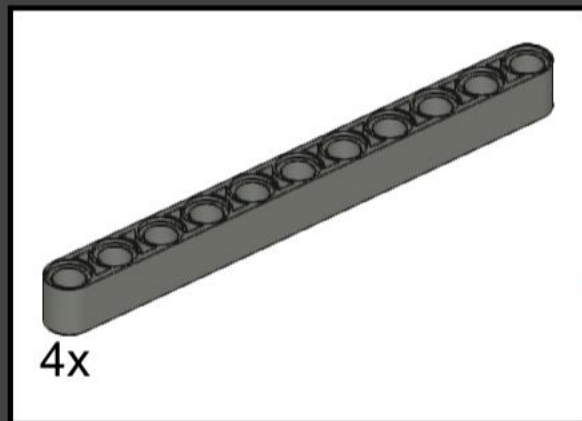


# 11

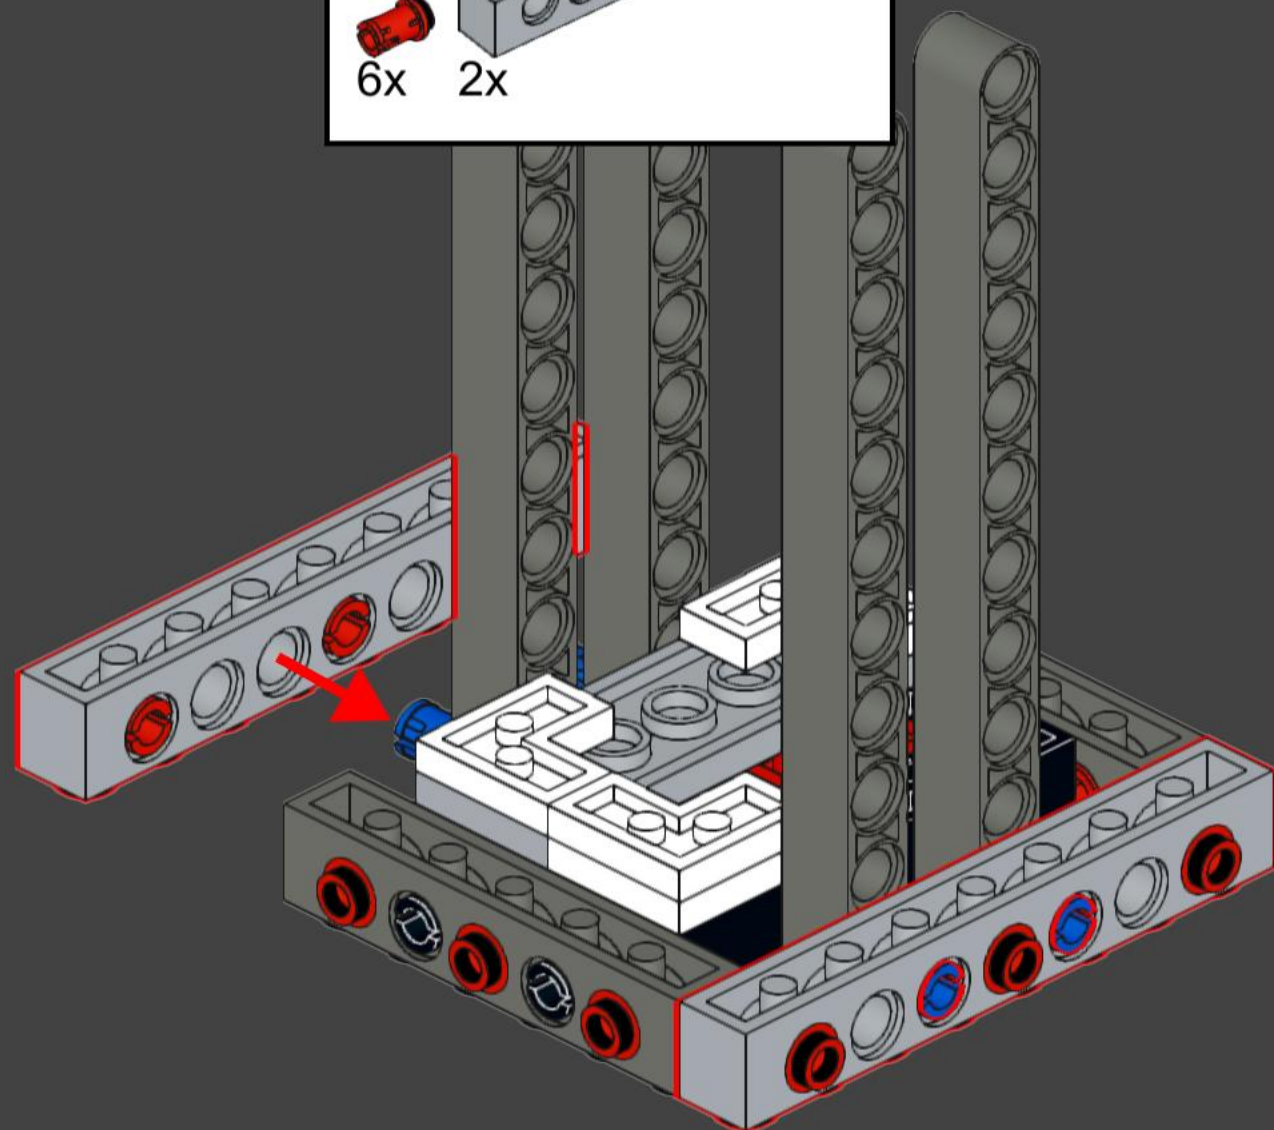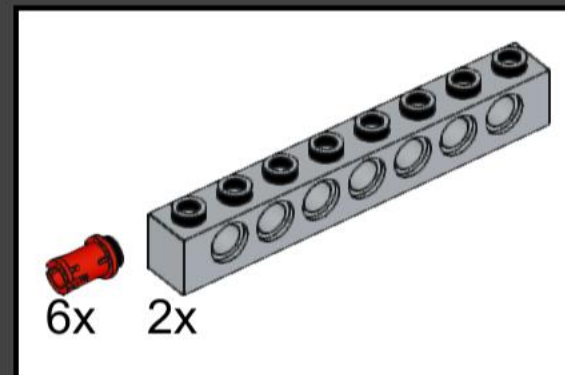





# 12

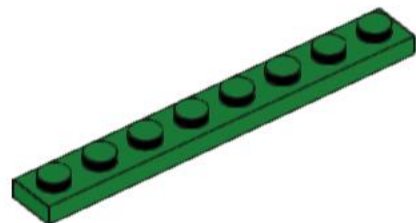

1x

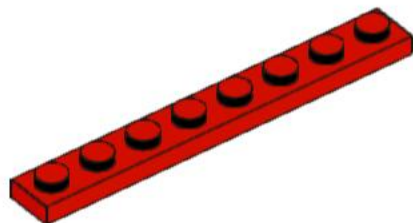


1x

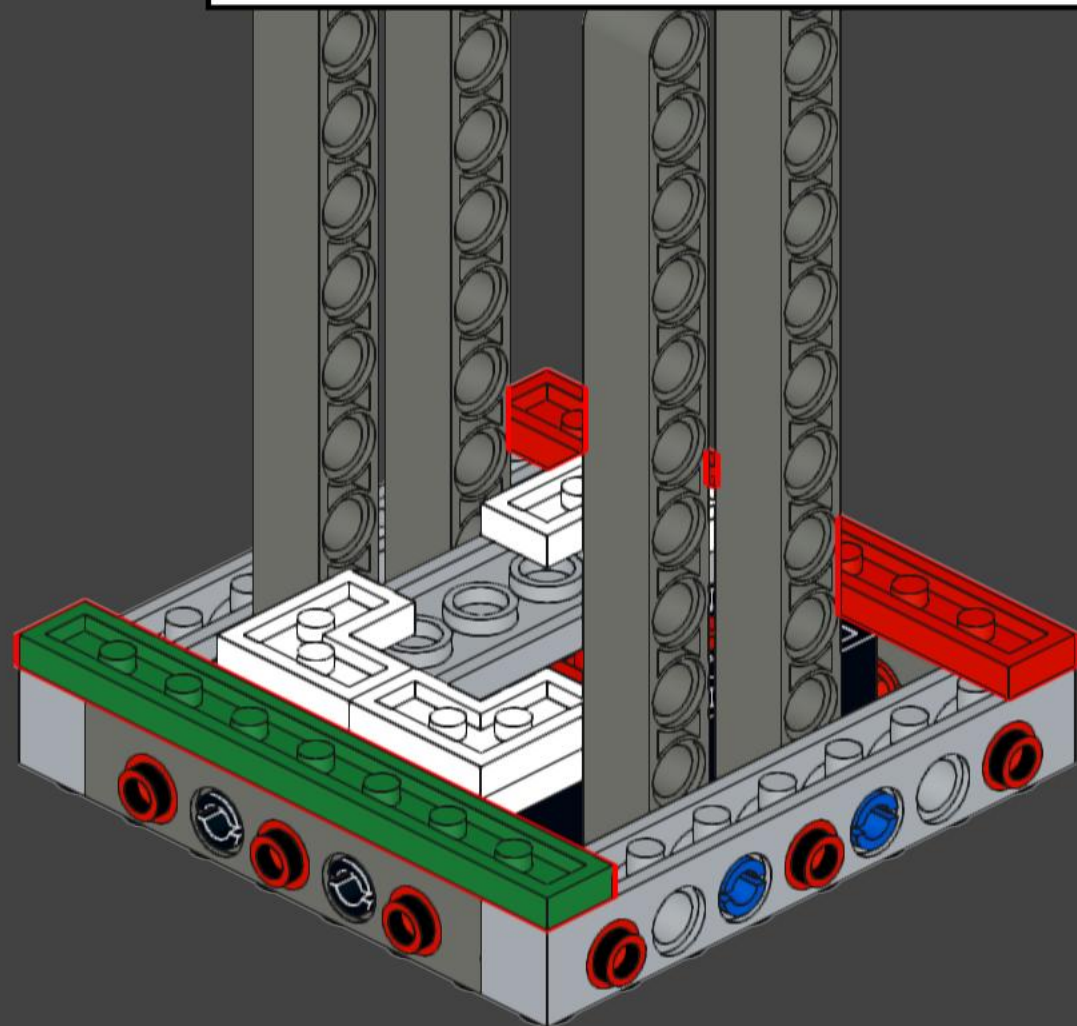

# 13





4x


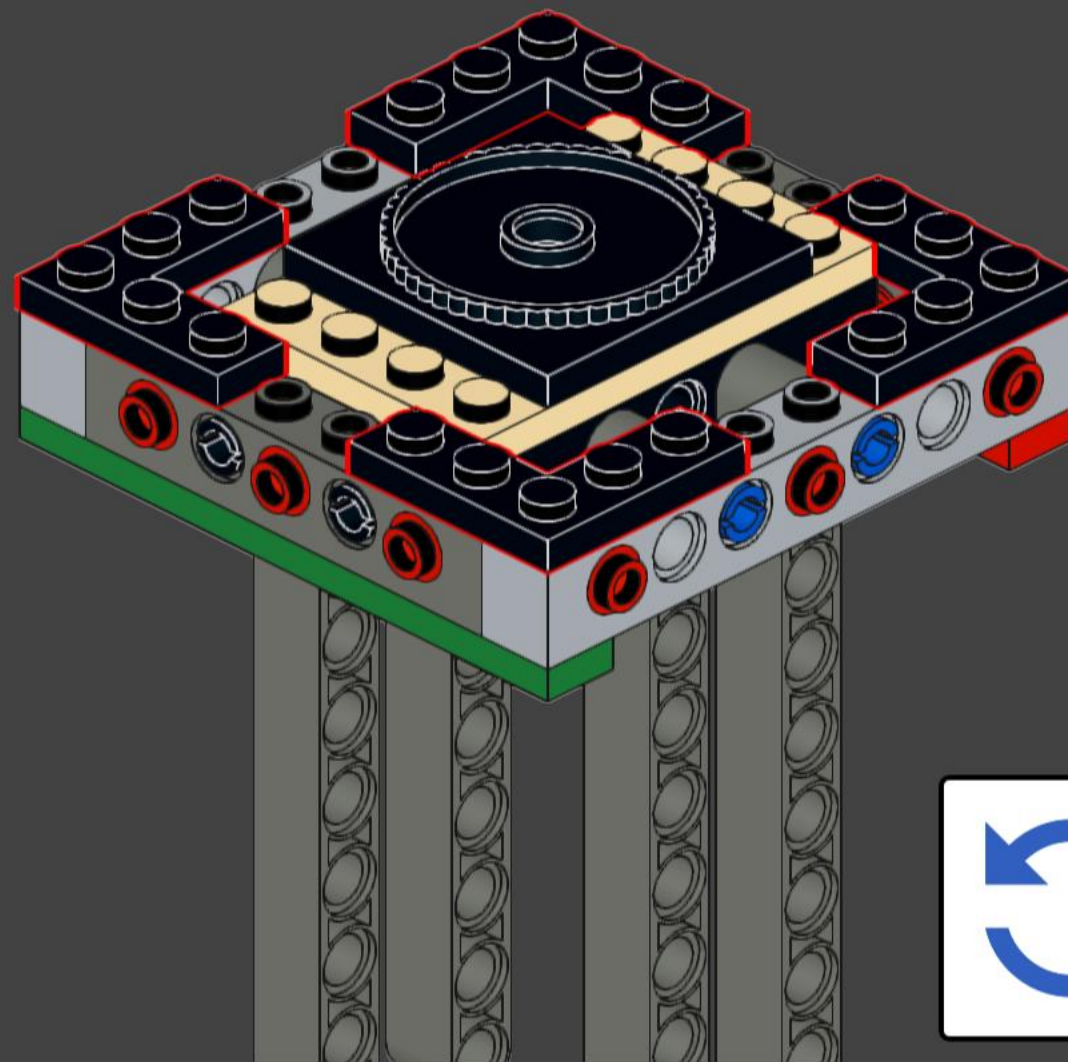






# 14

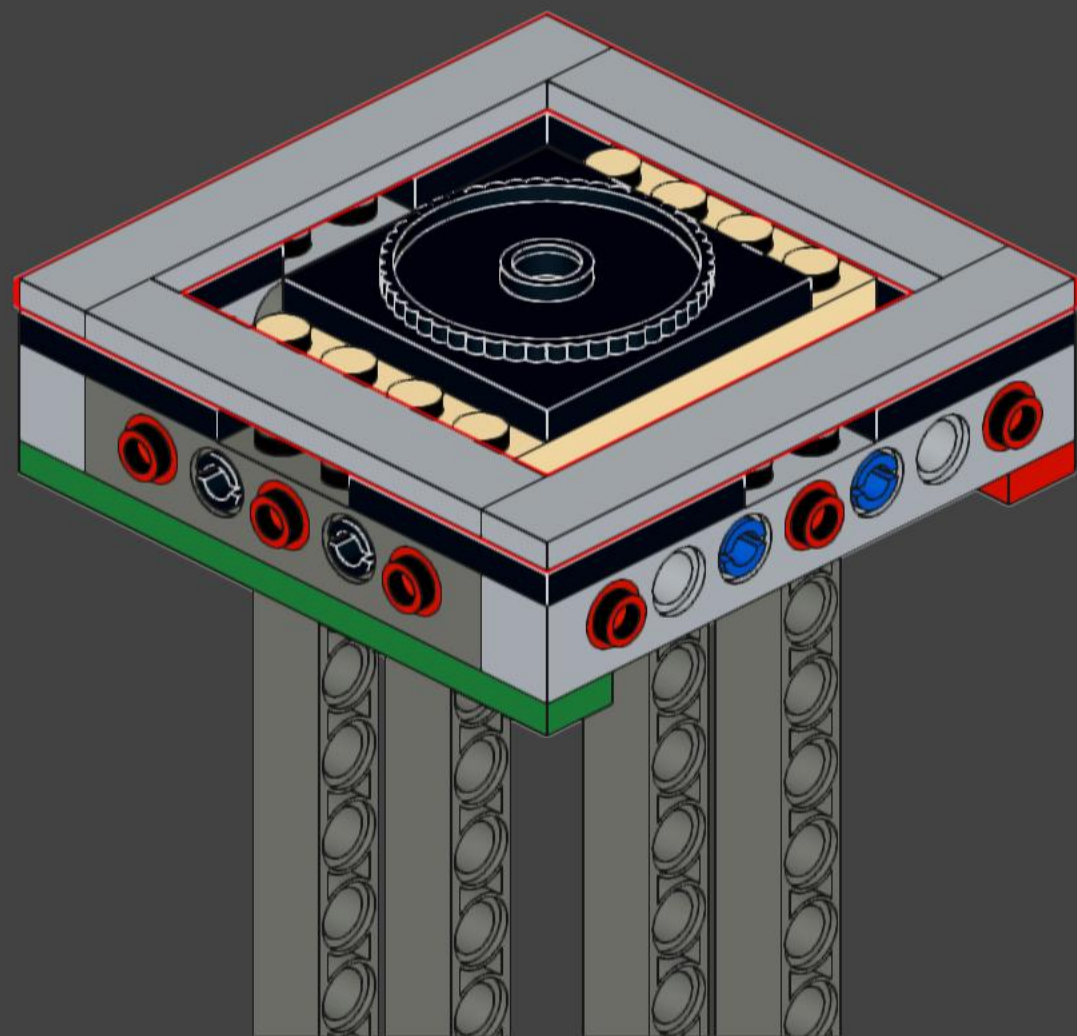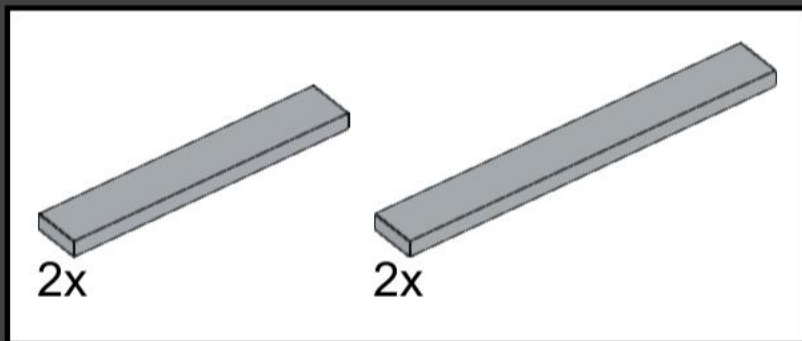


# 15

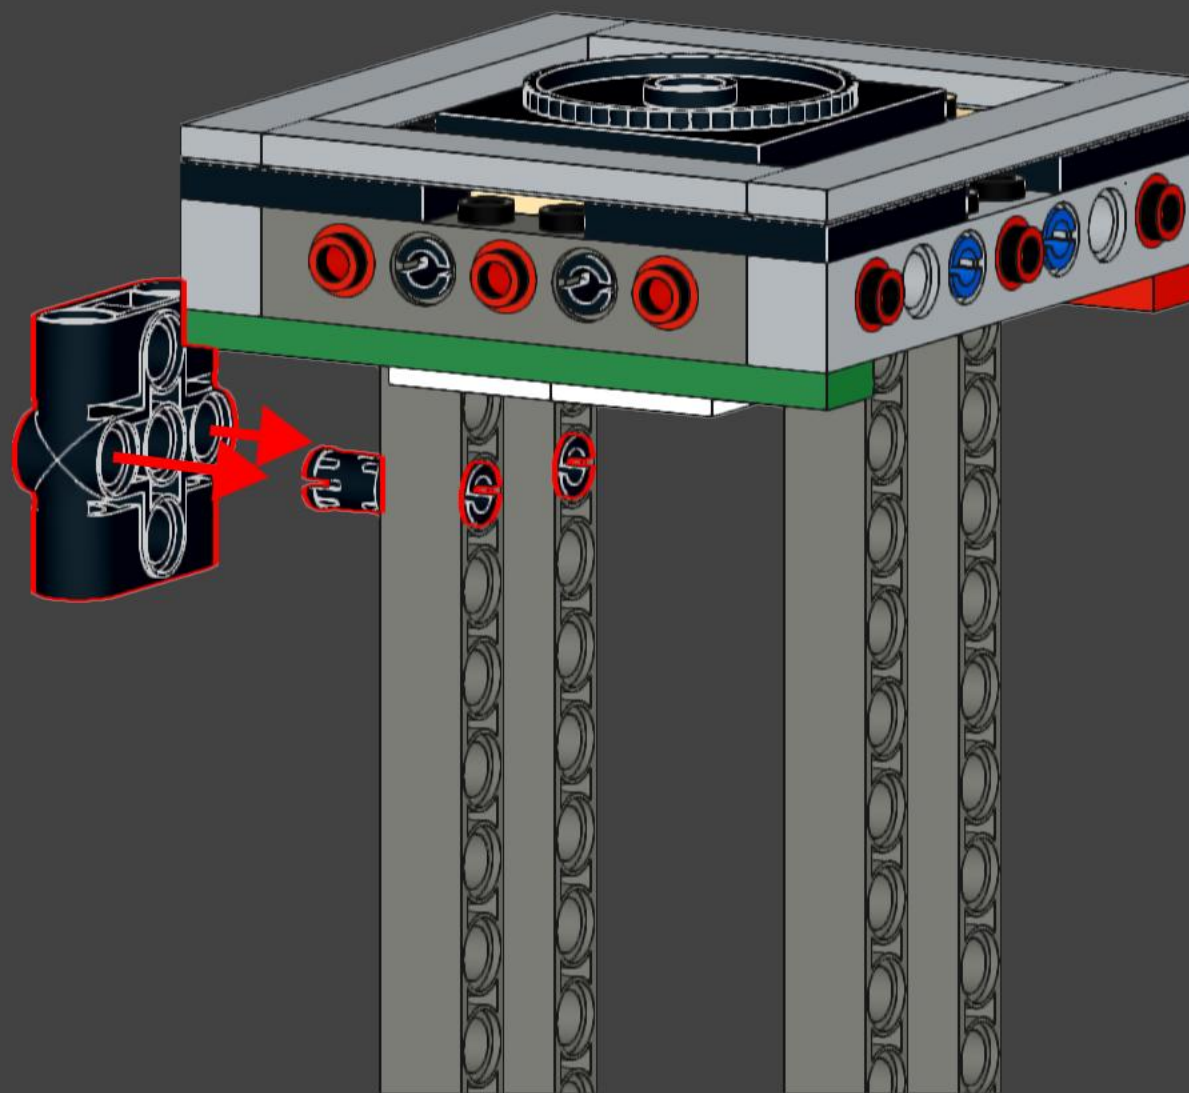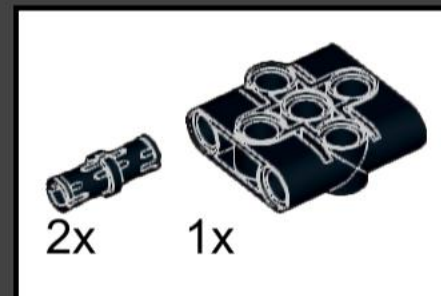


# 16

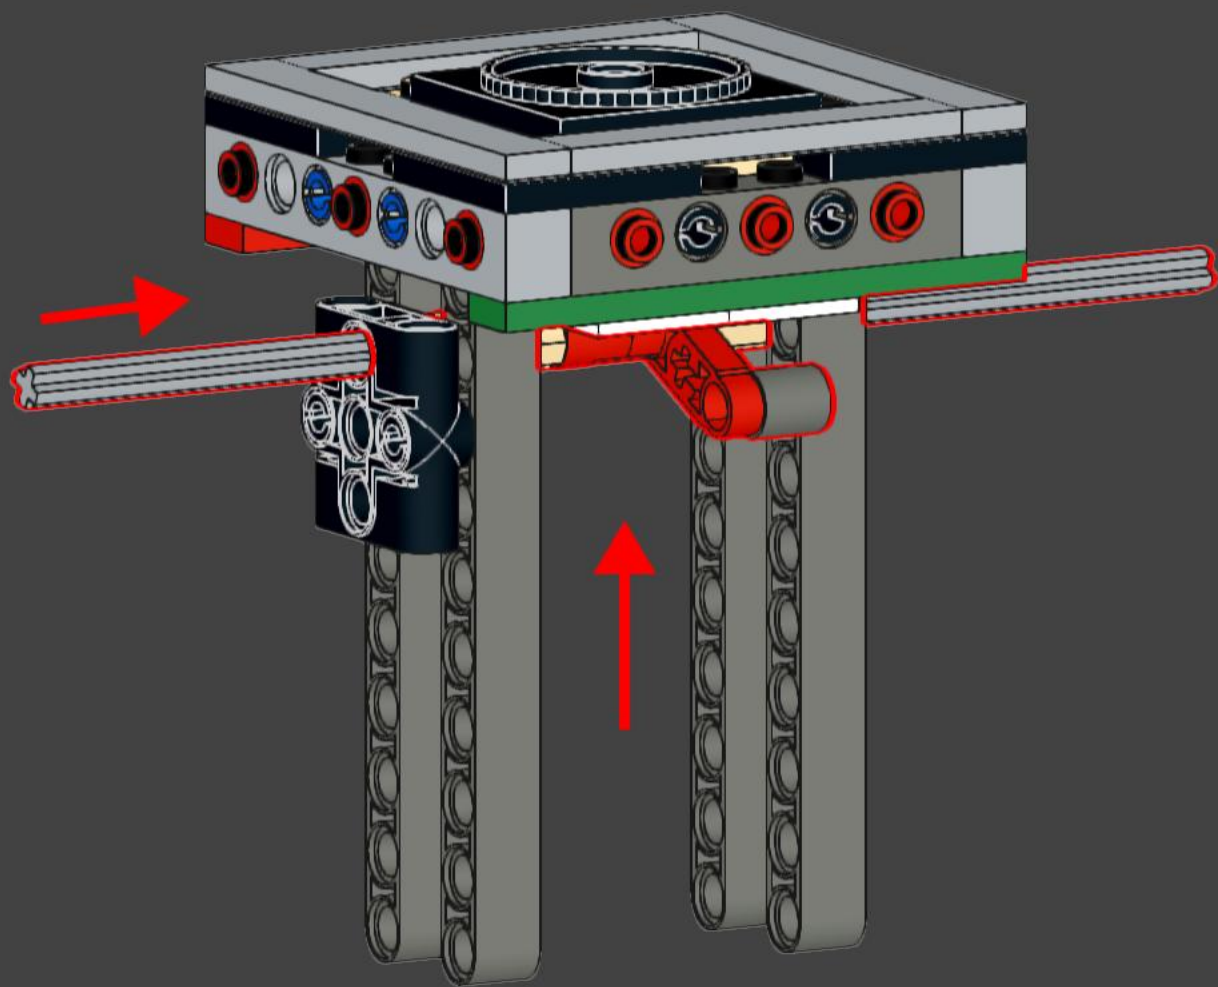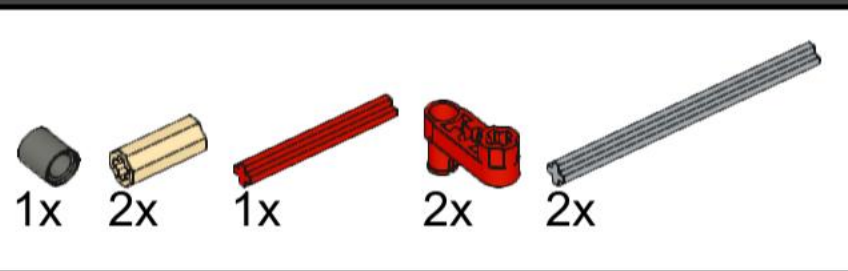


1

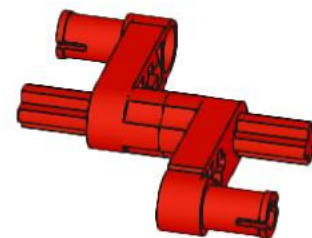



2

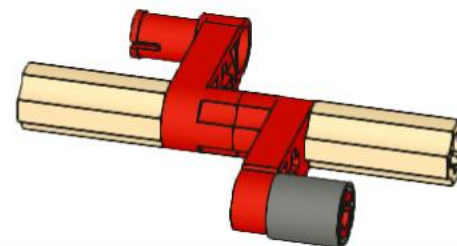

3


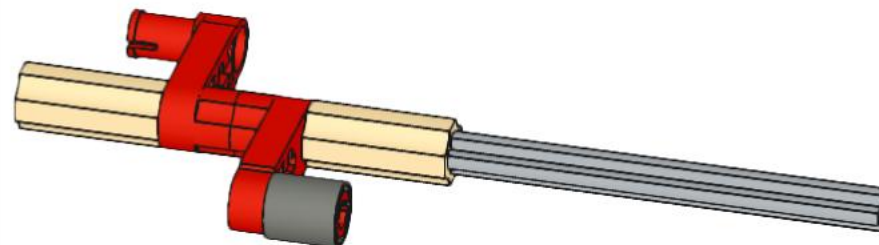


# 17

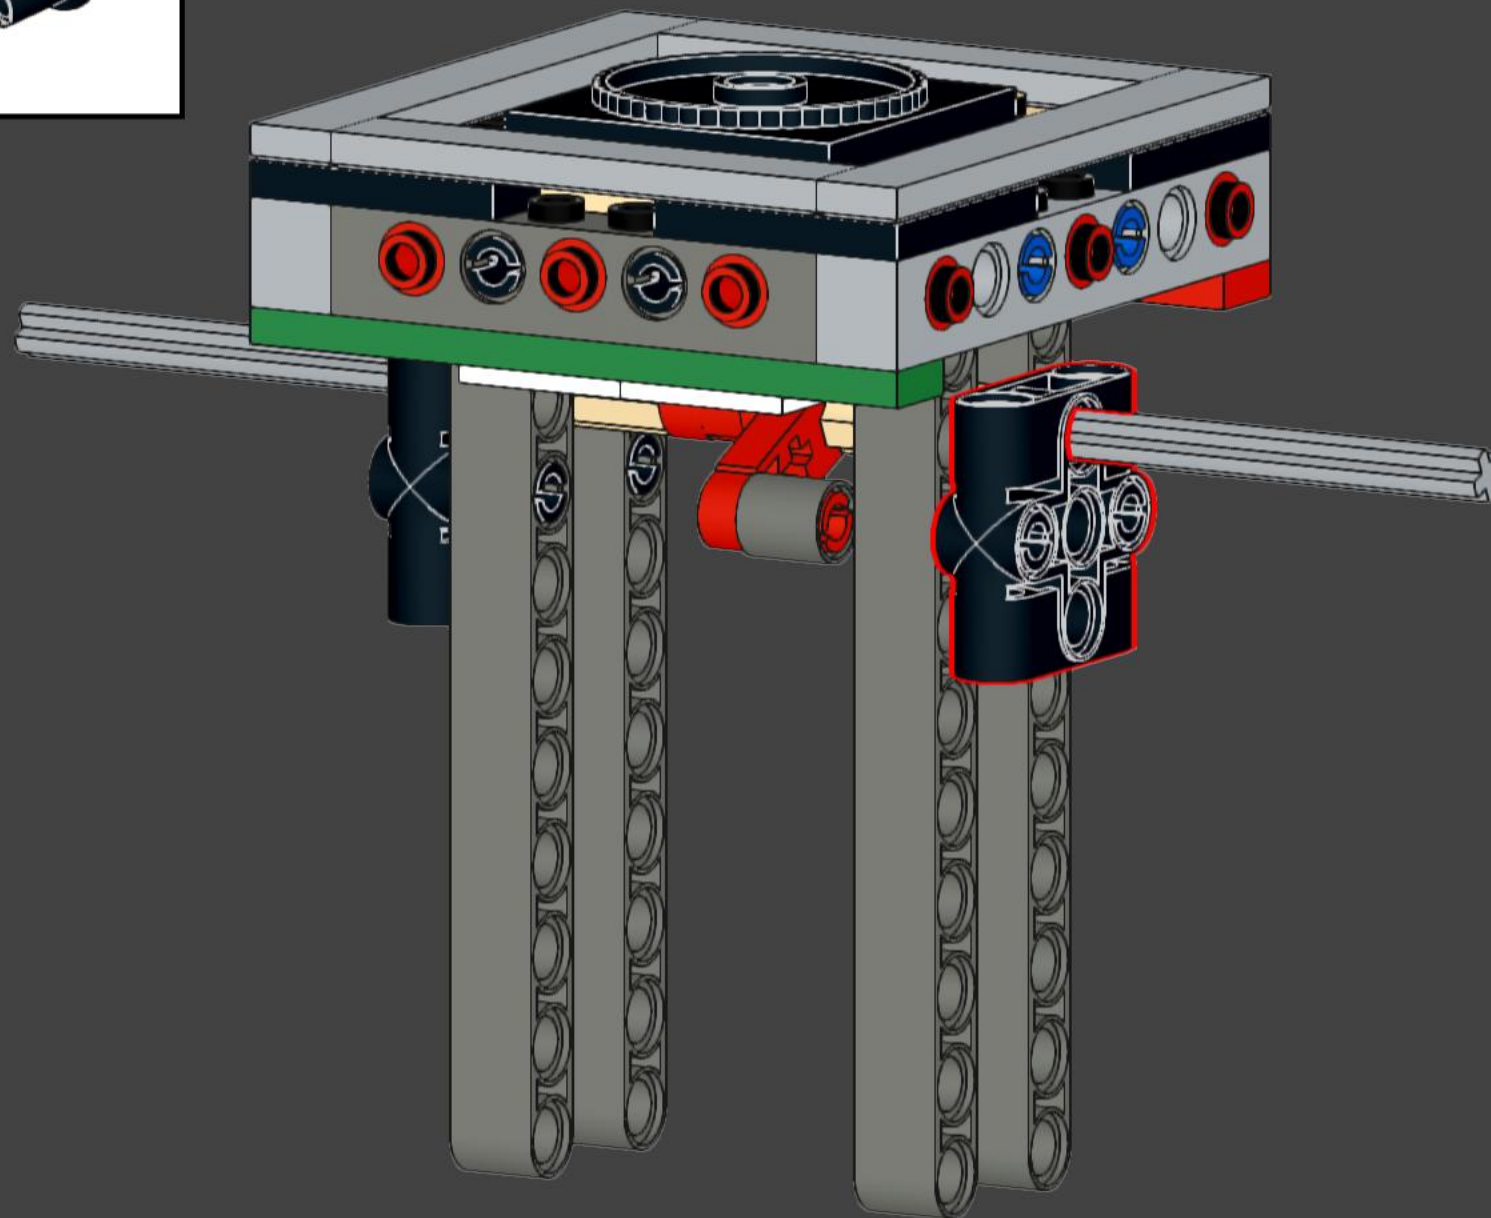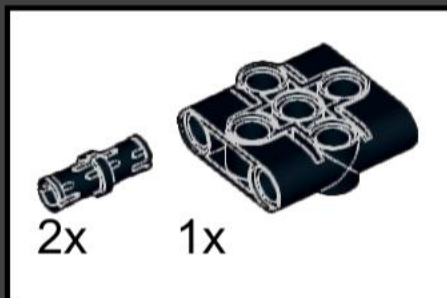





# 18

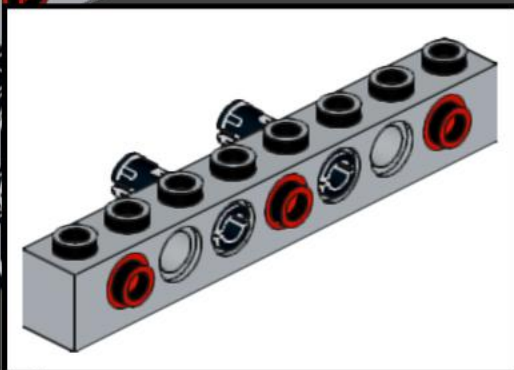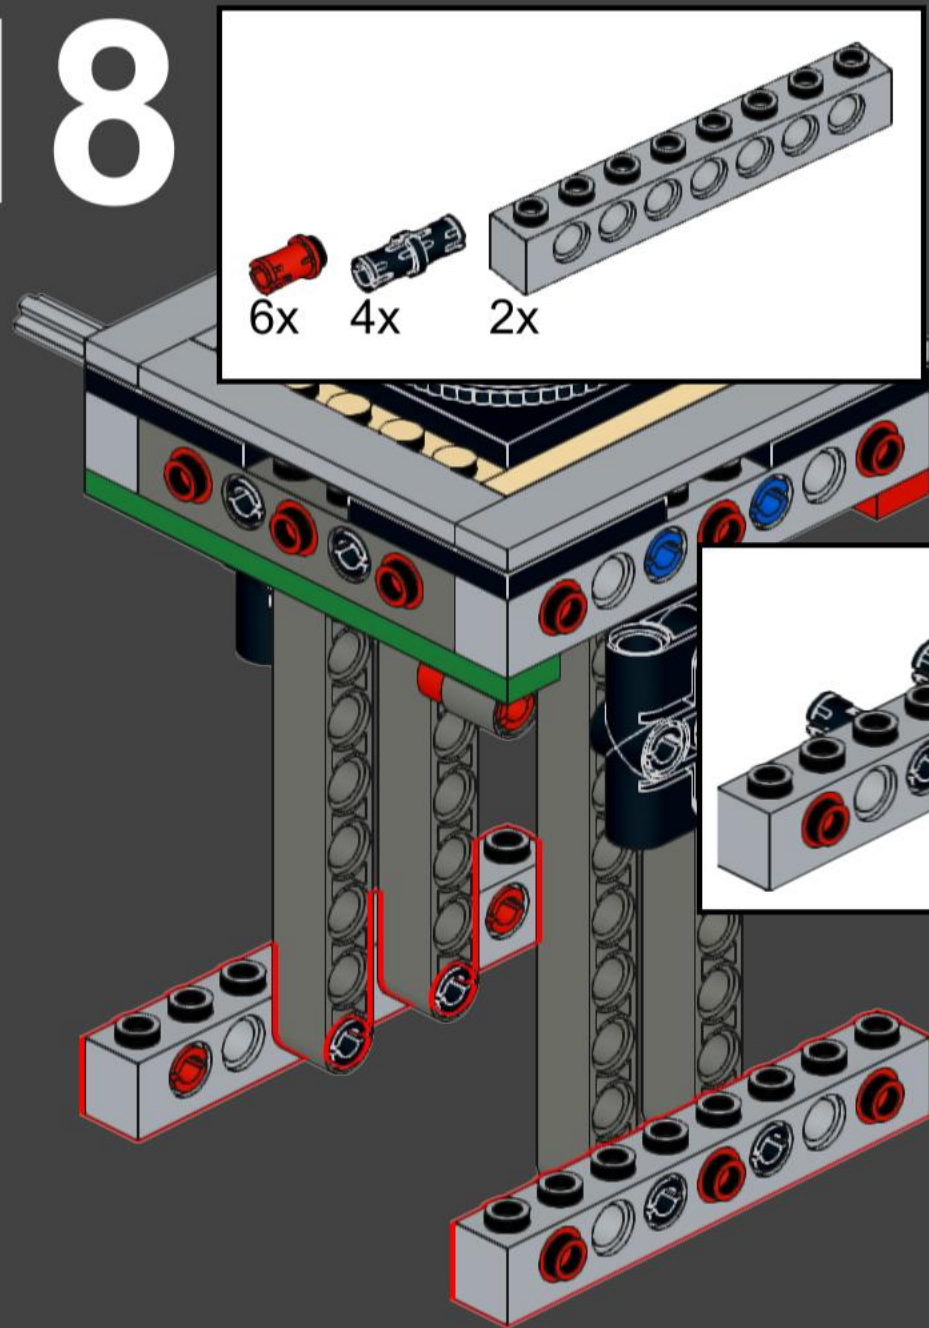

2x



# 19

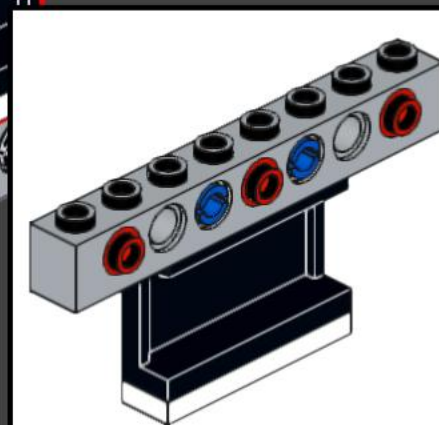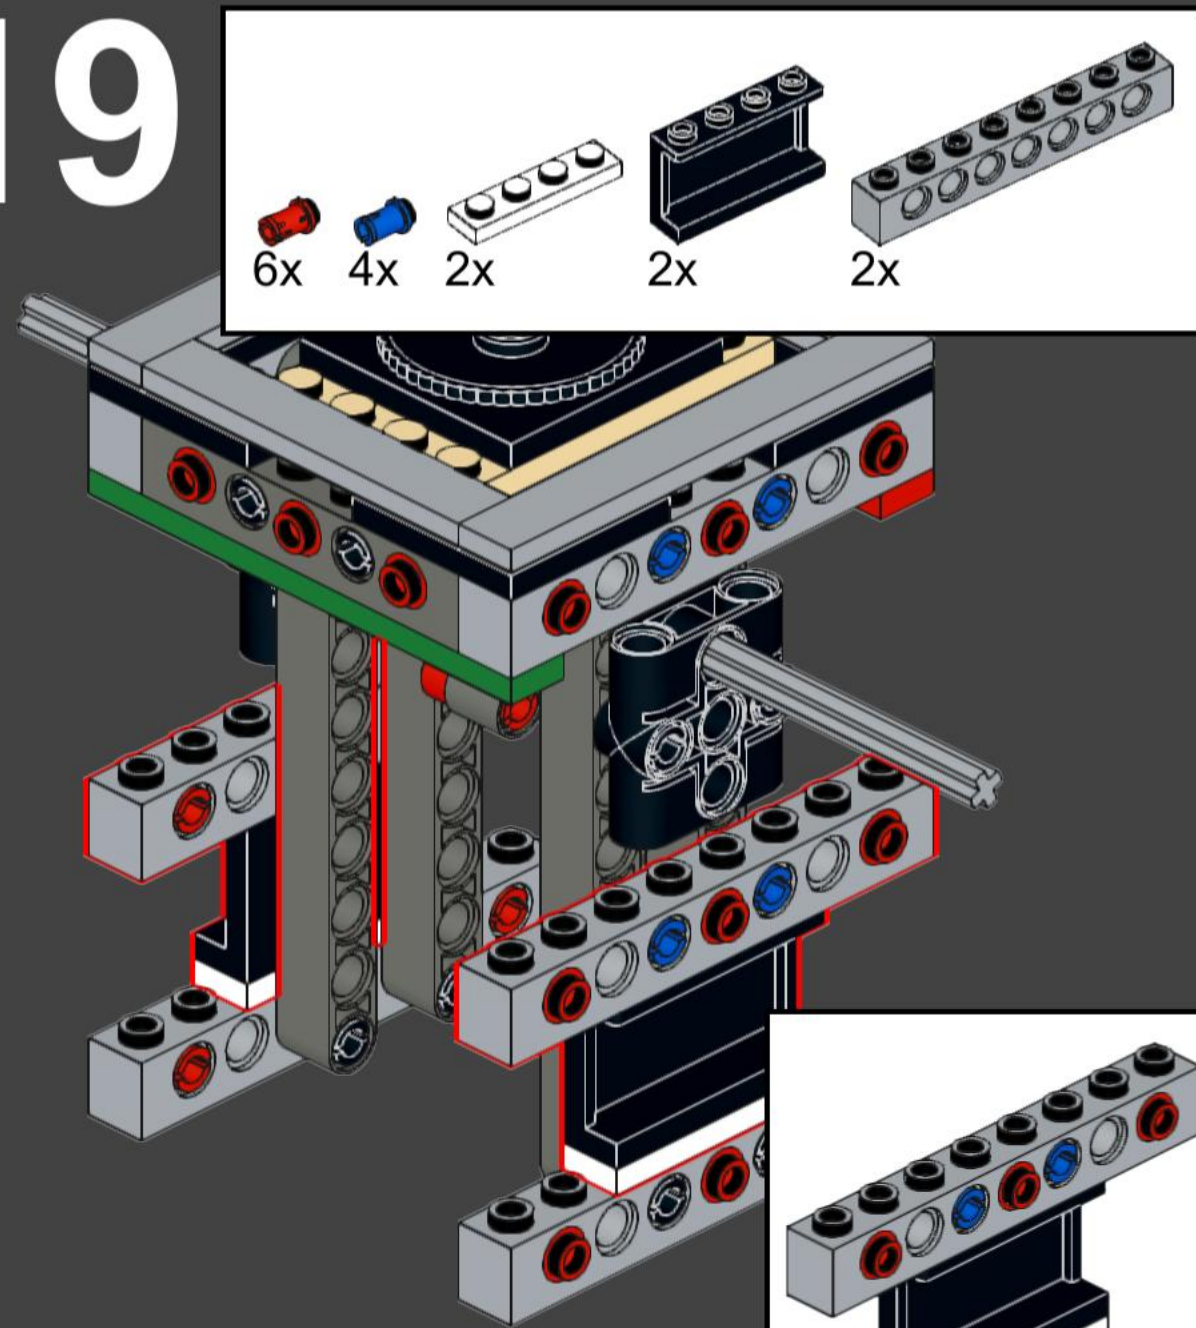



2x




# 20

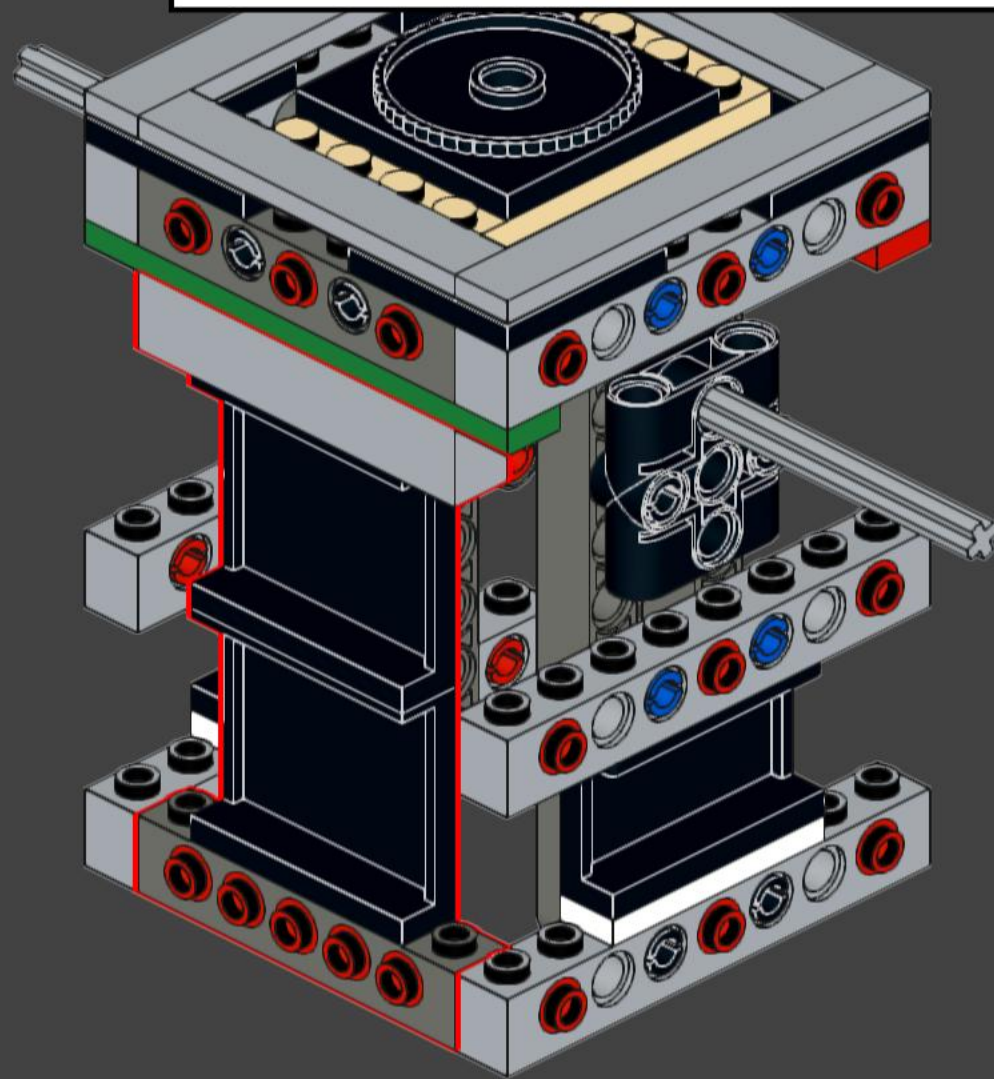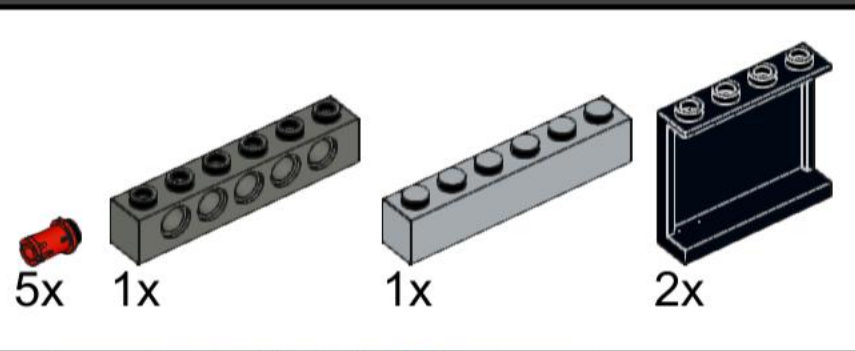



# 21

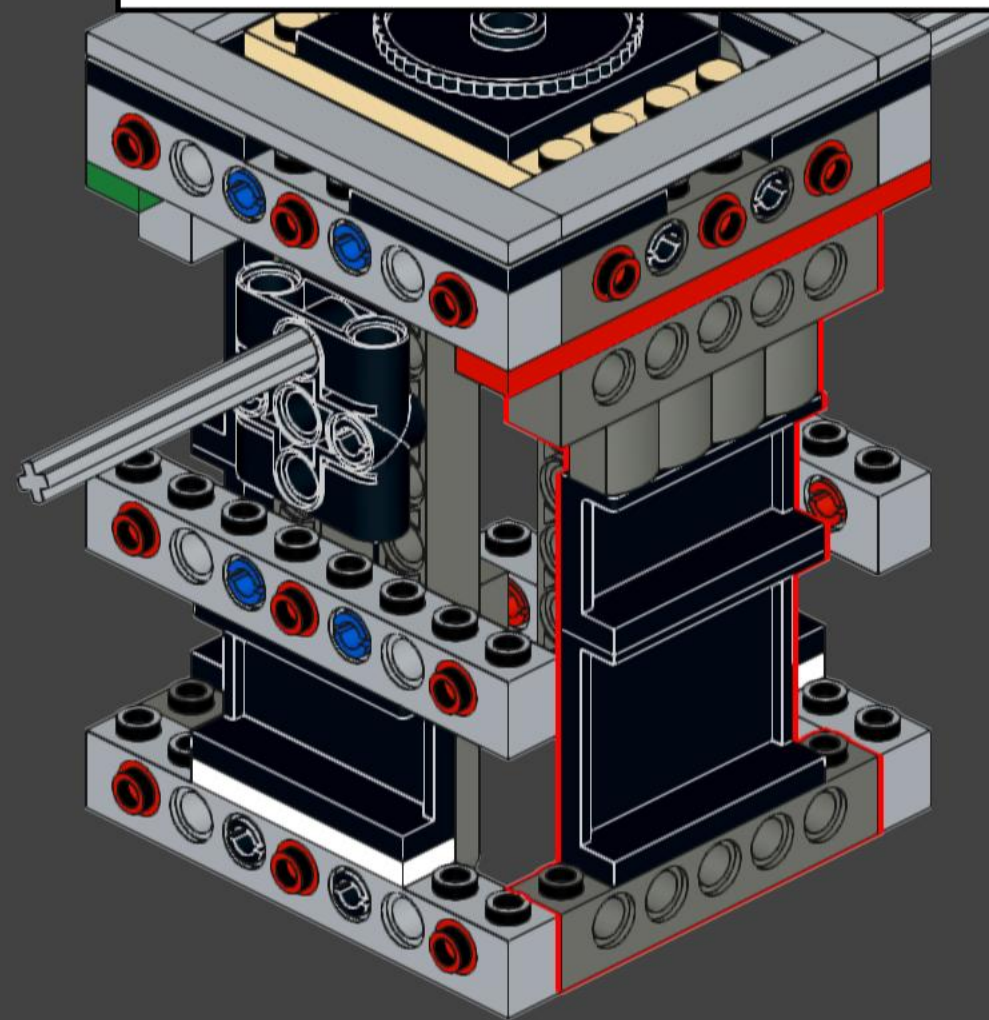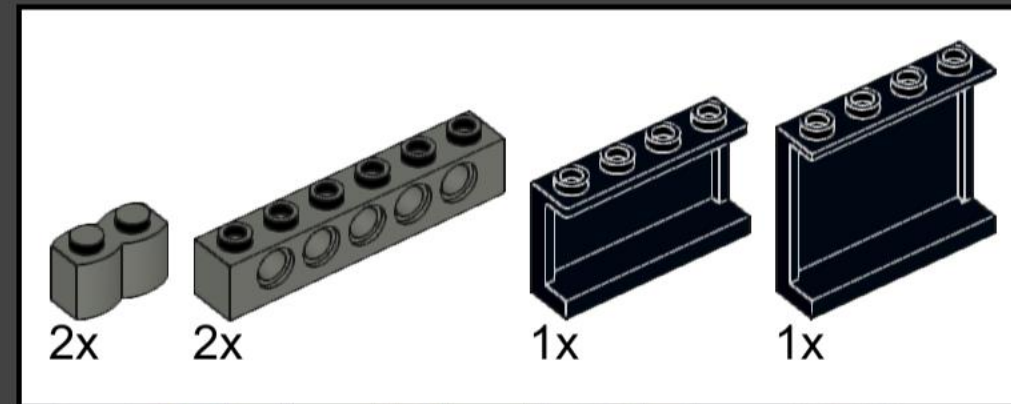

# 22


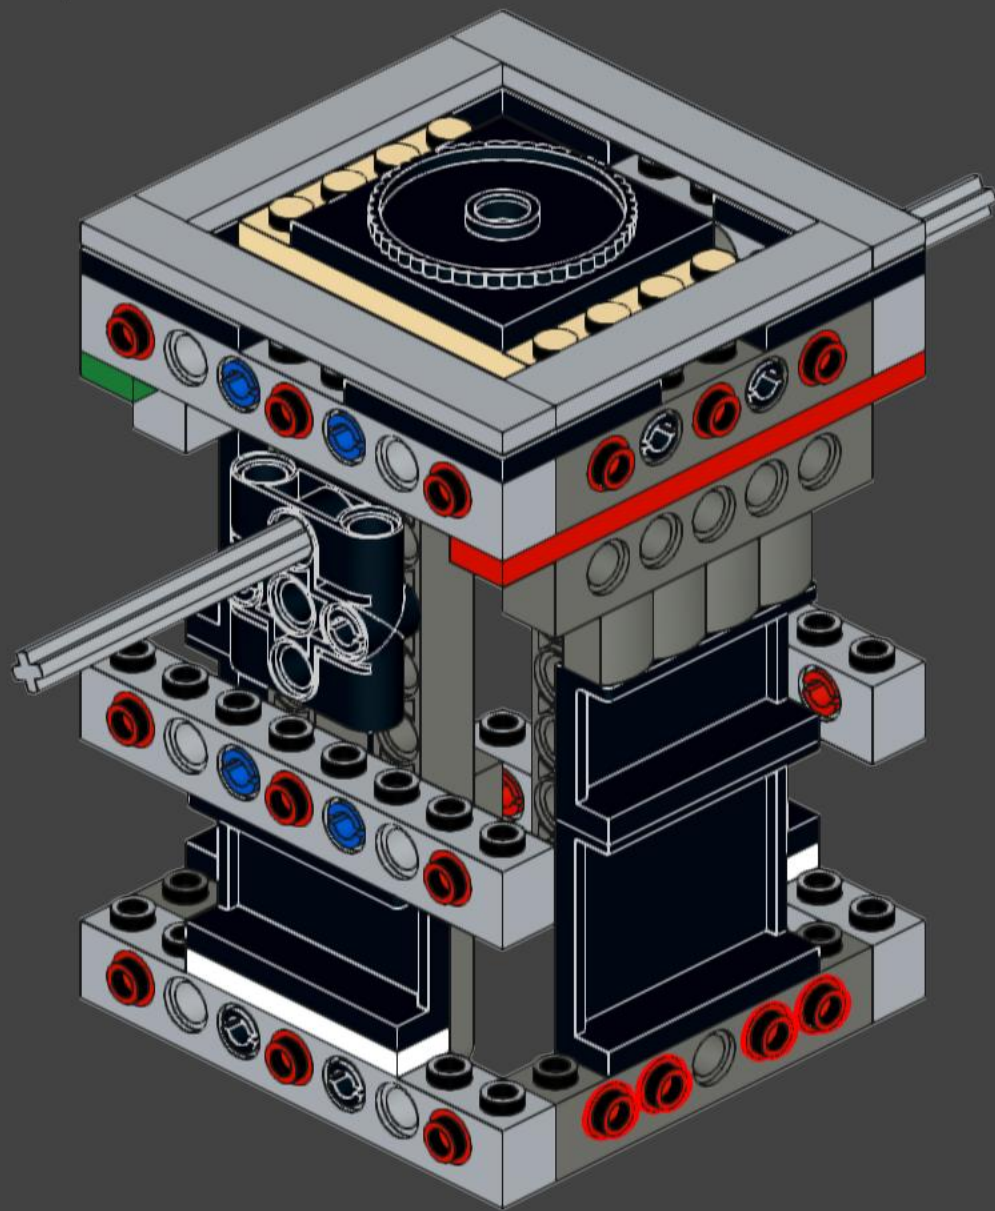


# 23

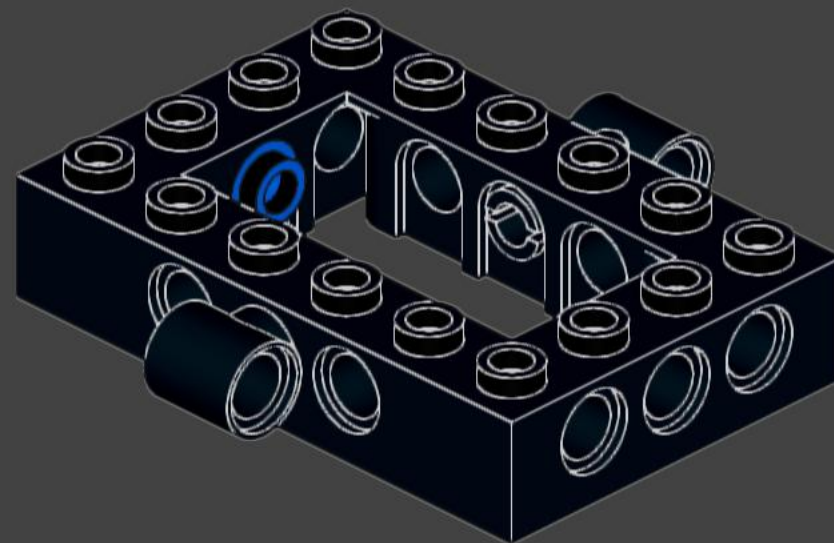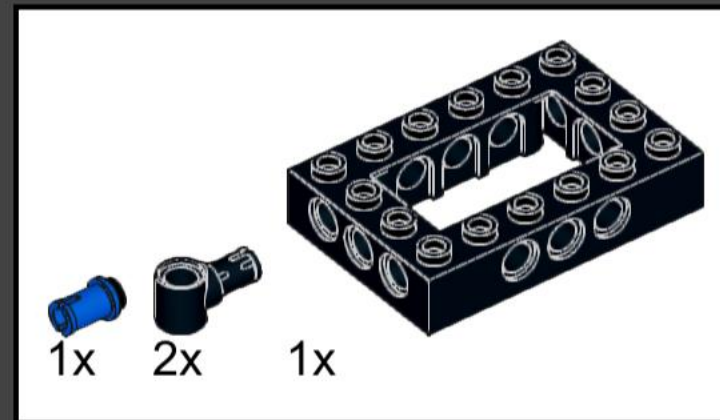






# 24

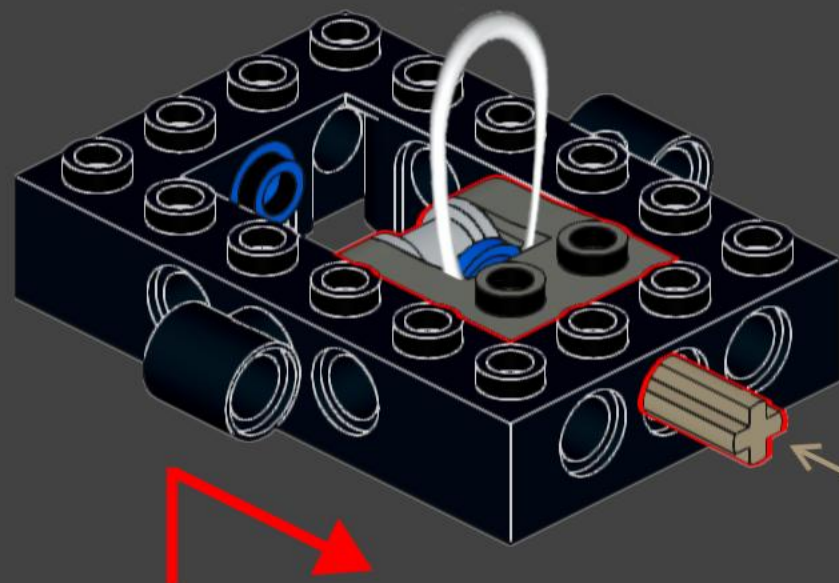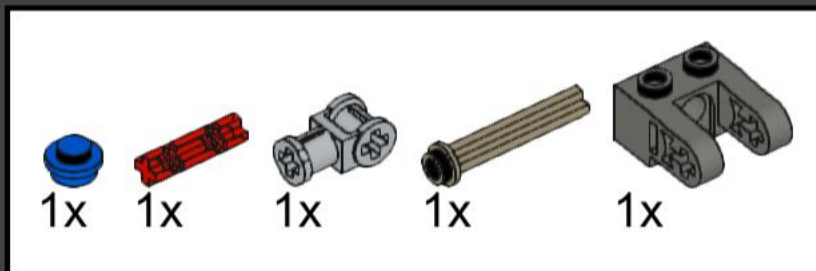



Locking Pin

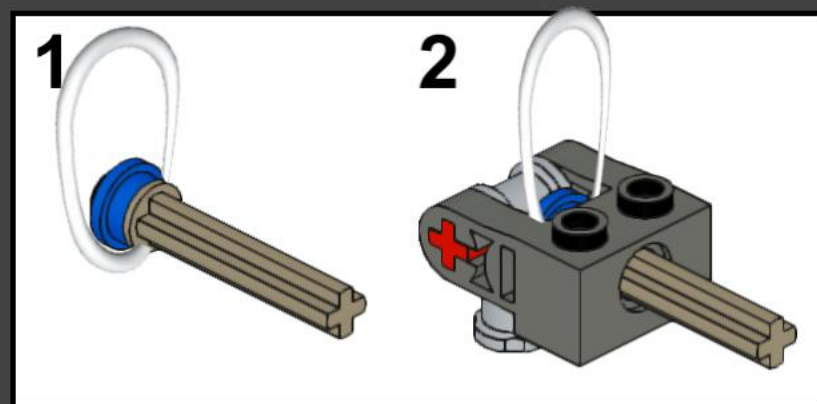

# 25


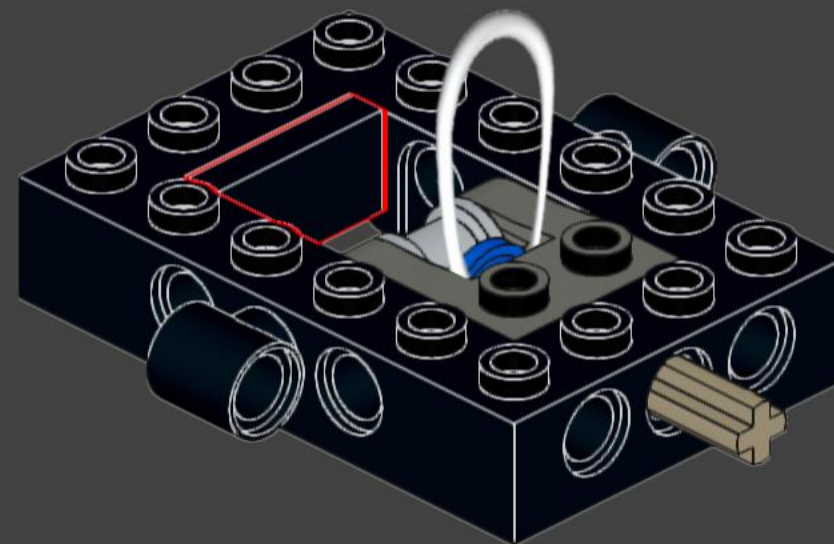
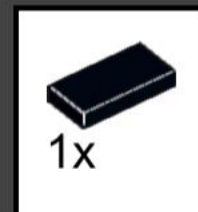


# 26

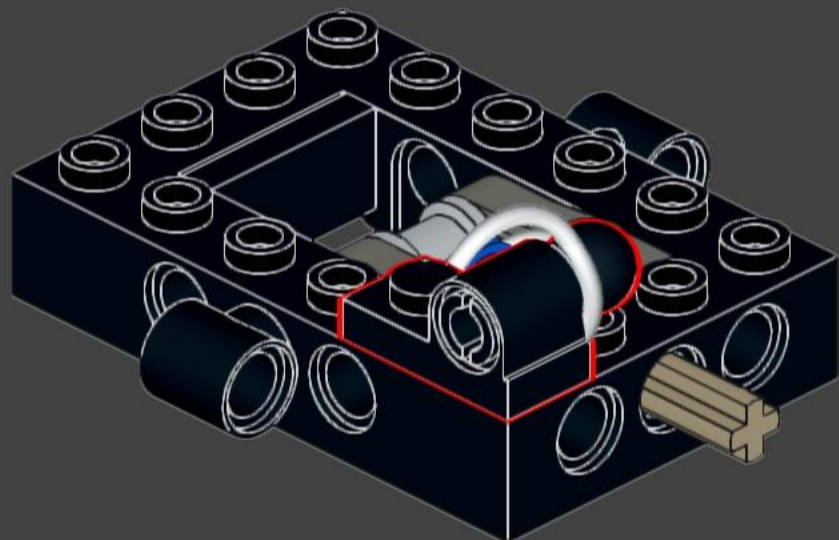
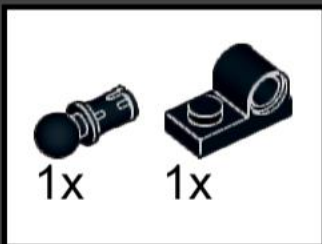


**Loop the Rubber  
Belt over the Tow  
Ball**



# 27

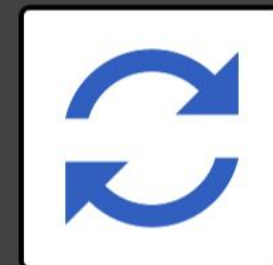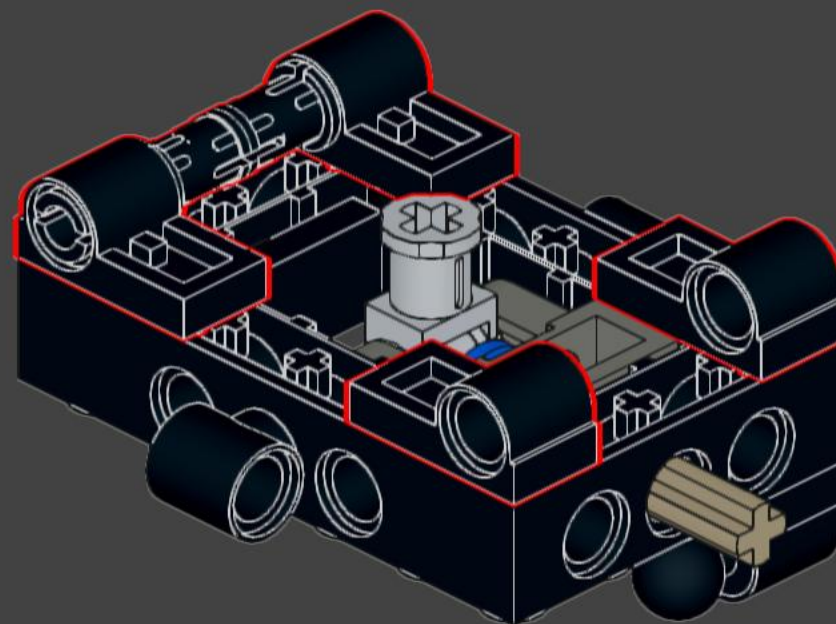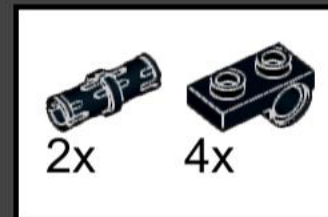

# 28

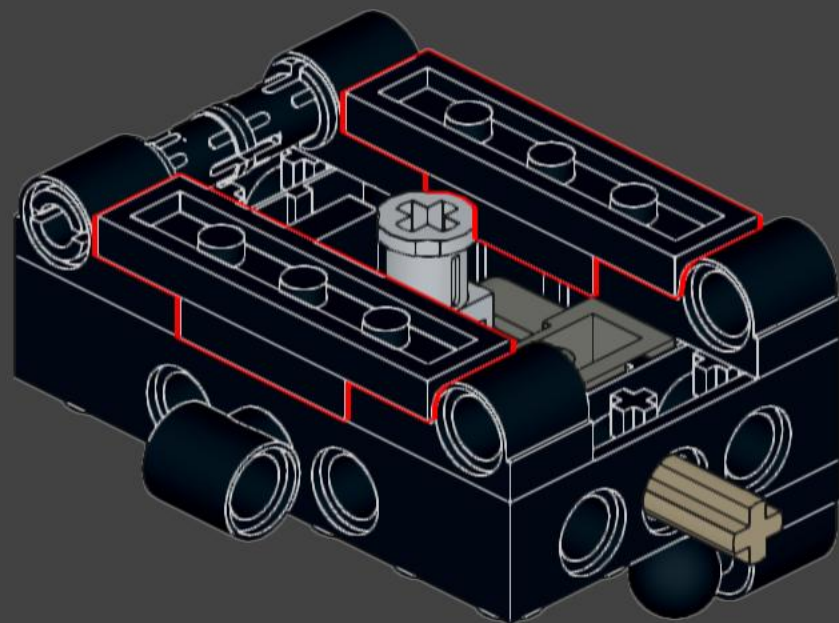
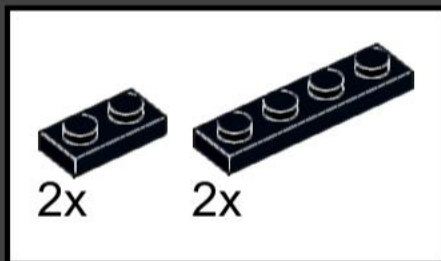


# 29

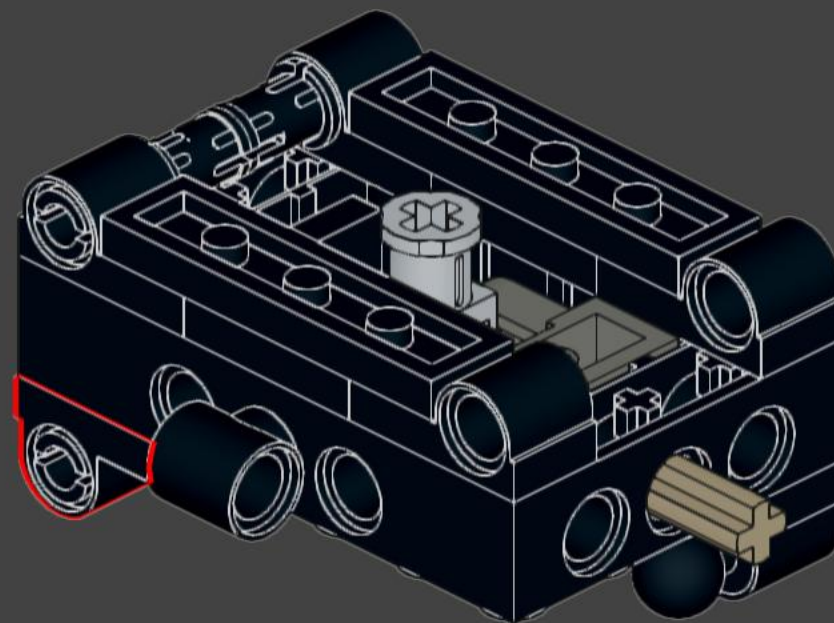
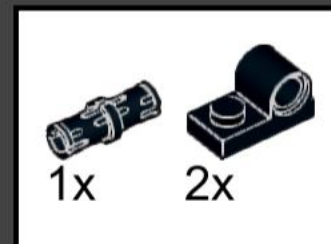





# 30

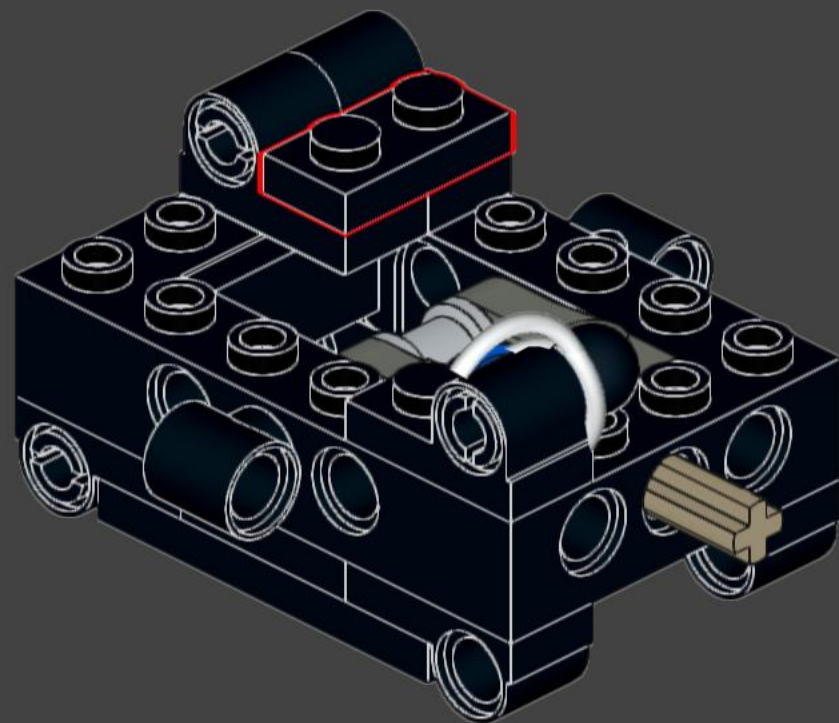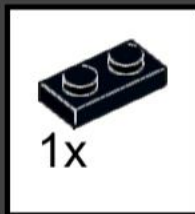

# 31

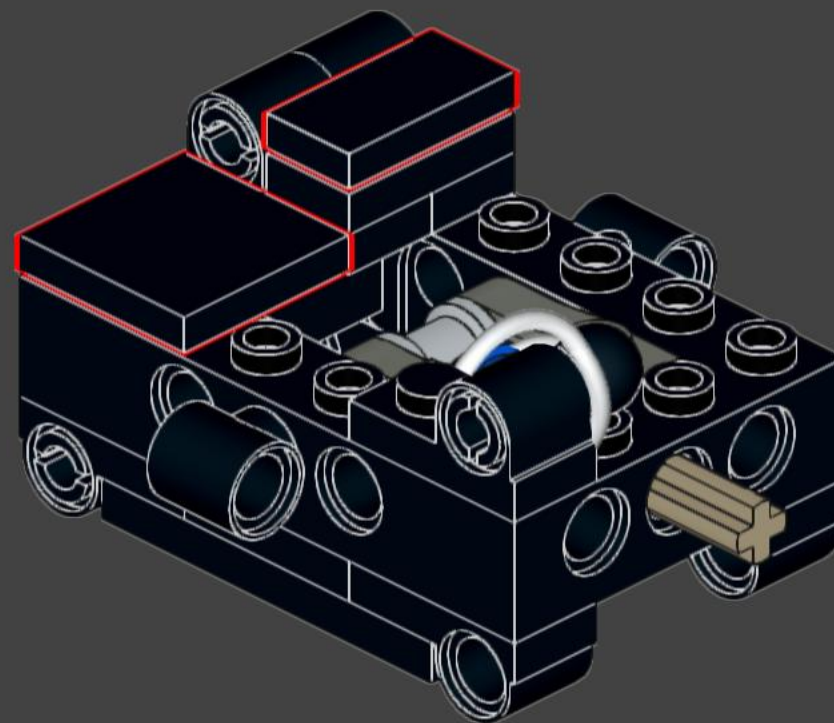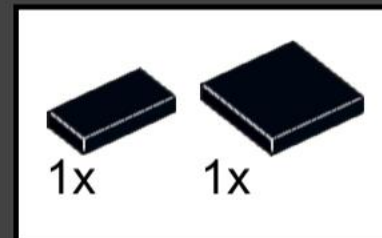


32

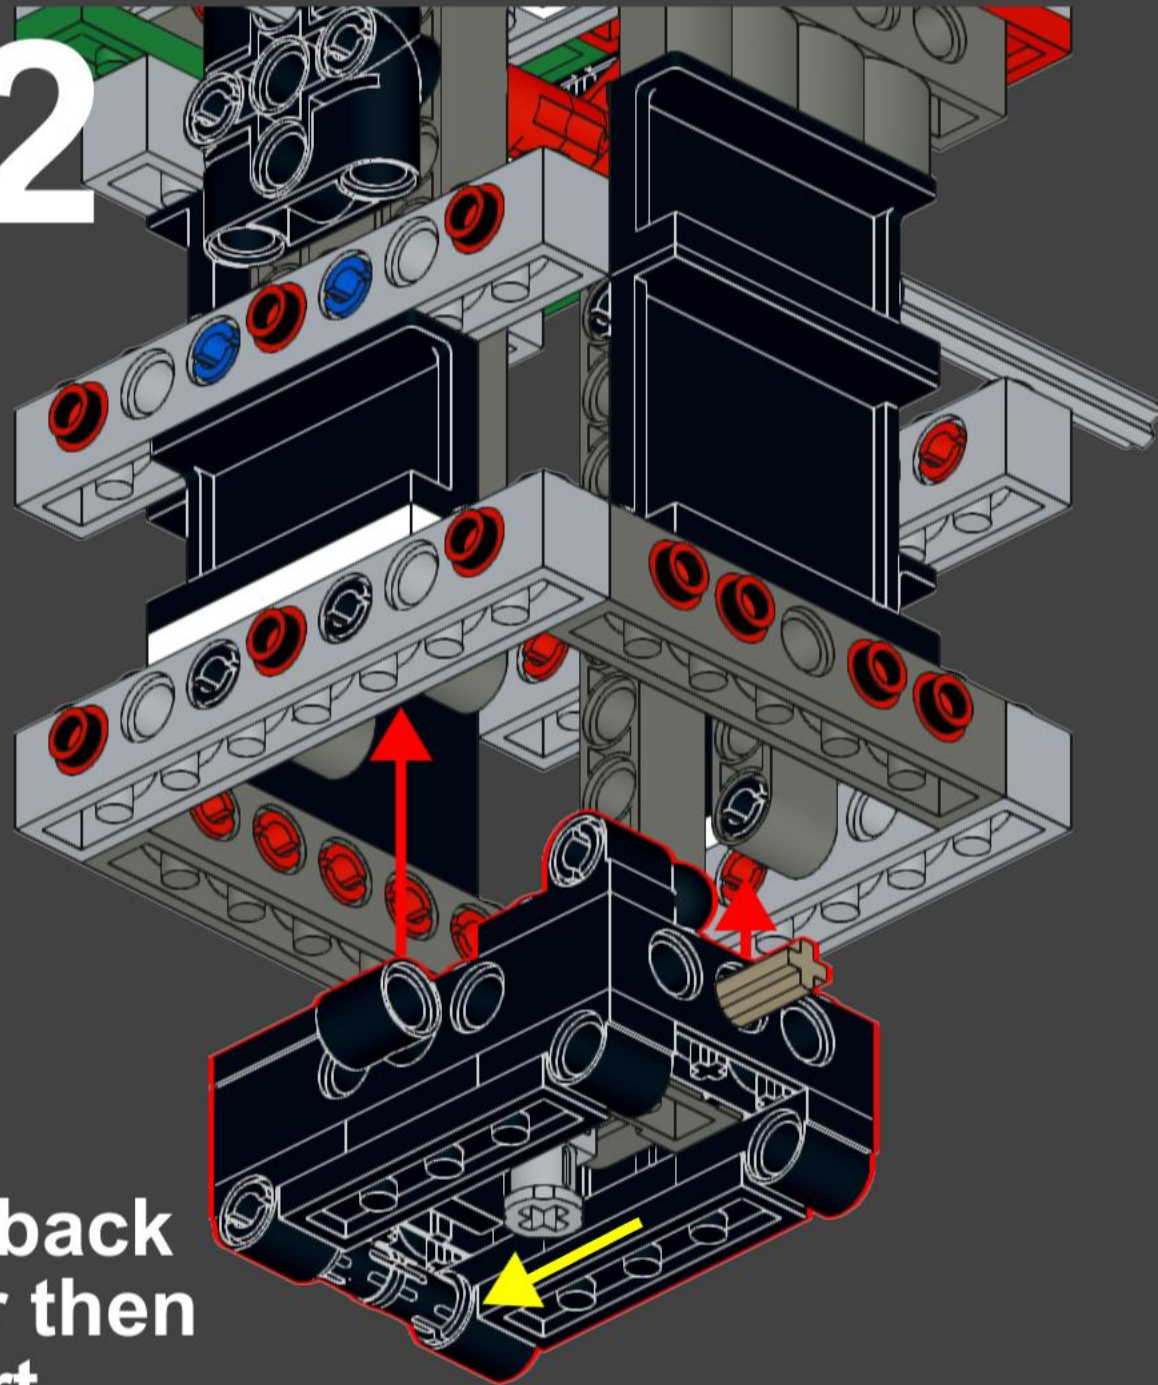

Pull back  
lever then  
insert



33

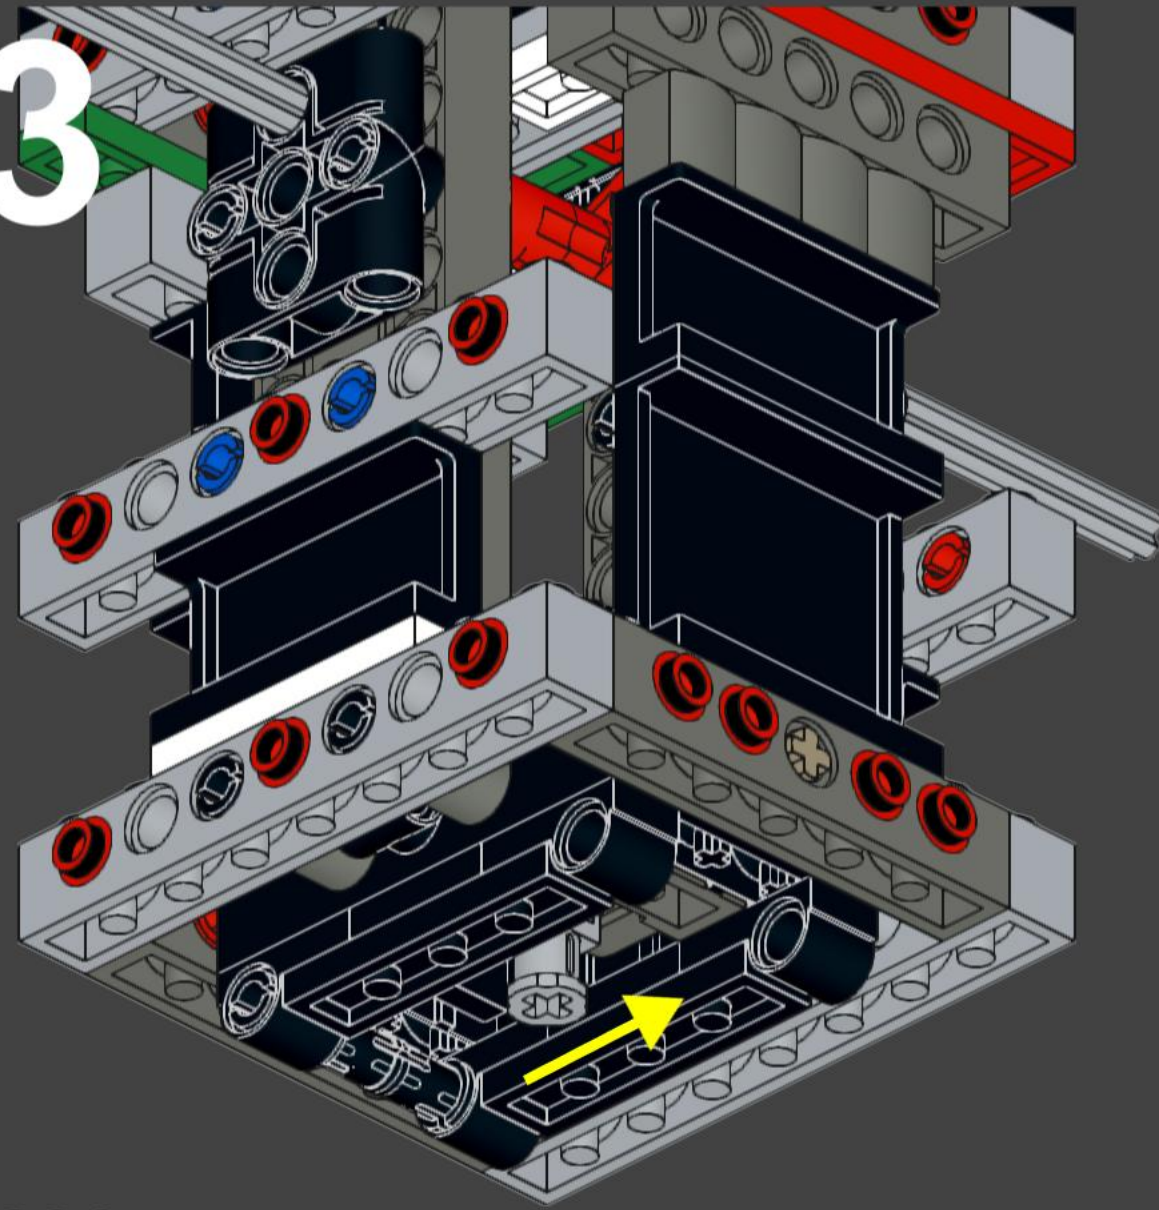



Release  
lever



34

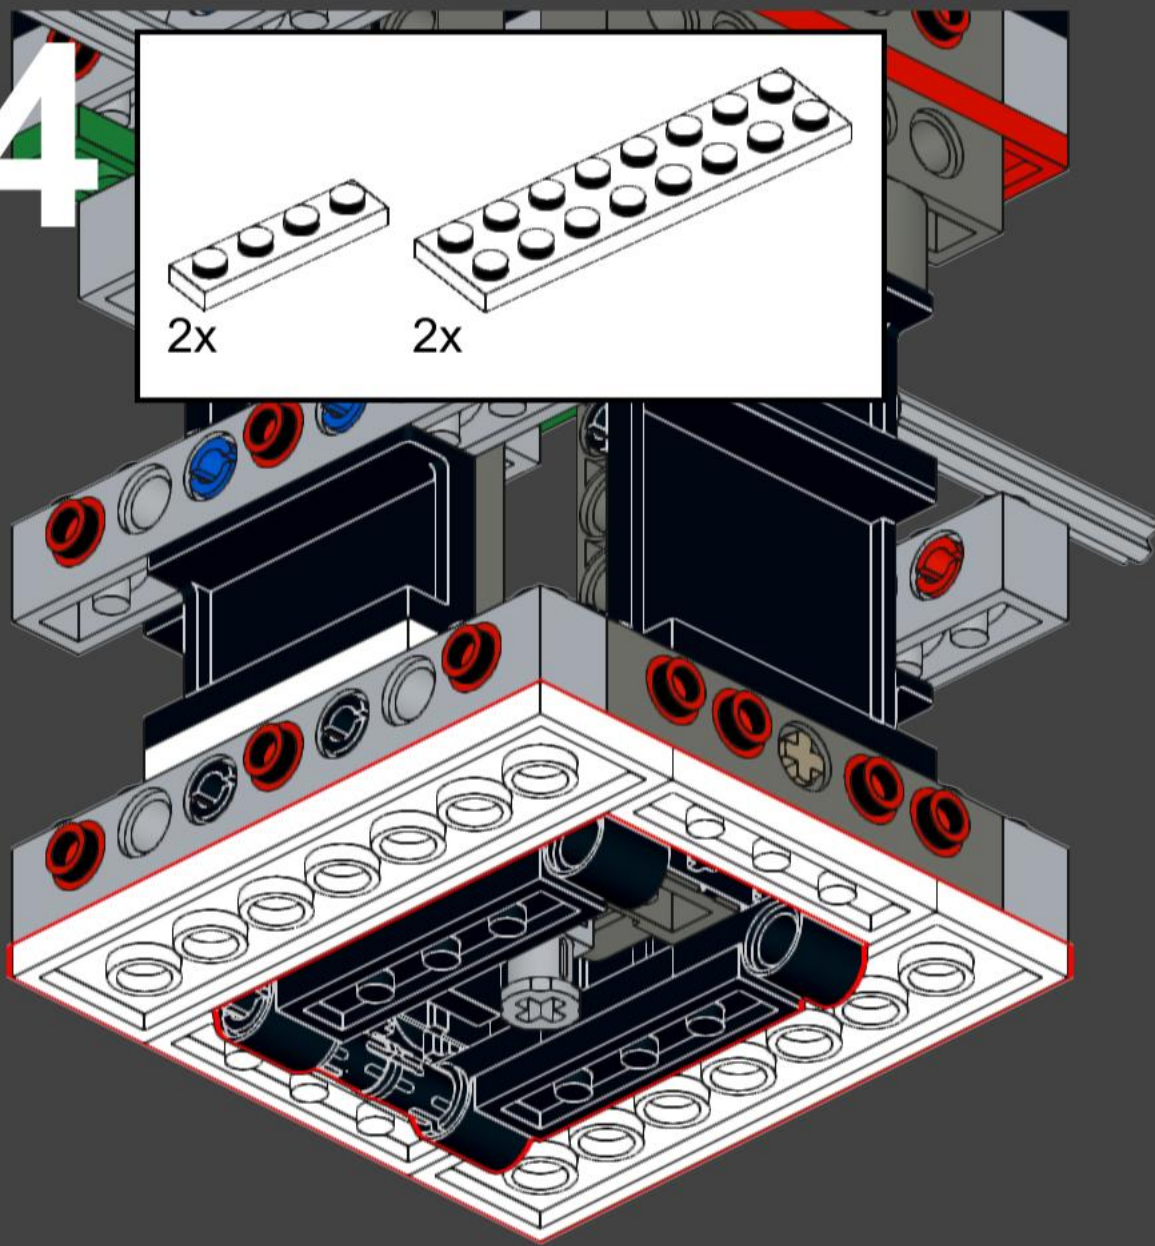
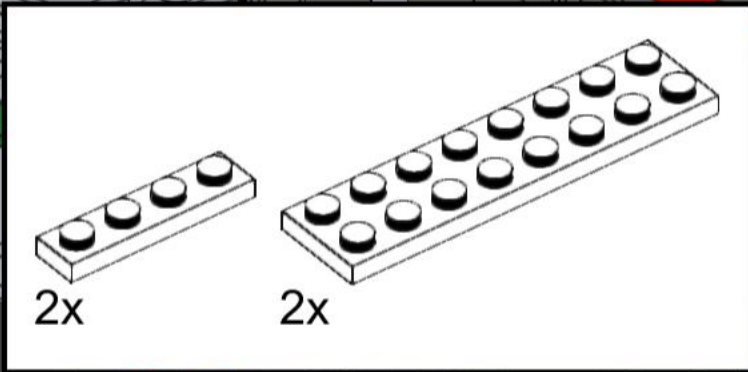


35

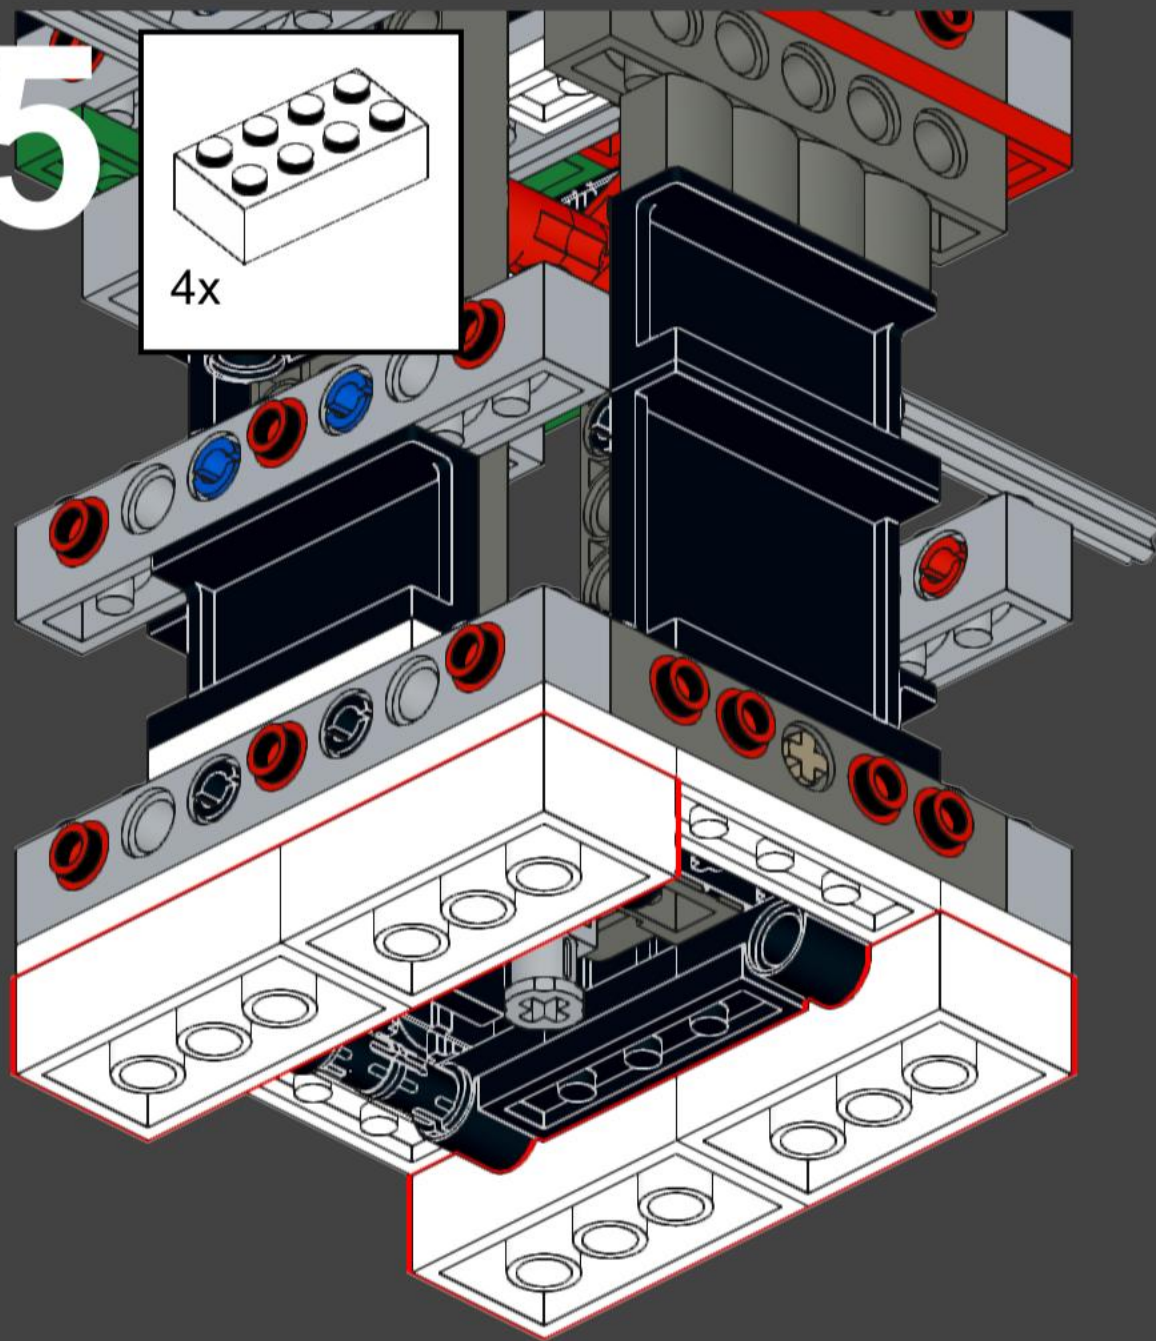
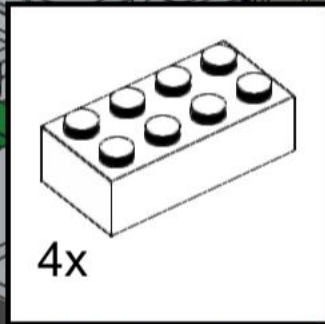




36

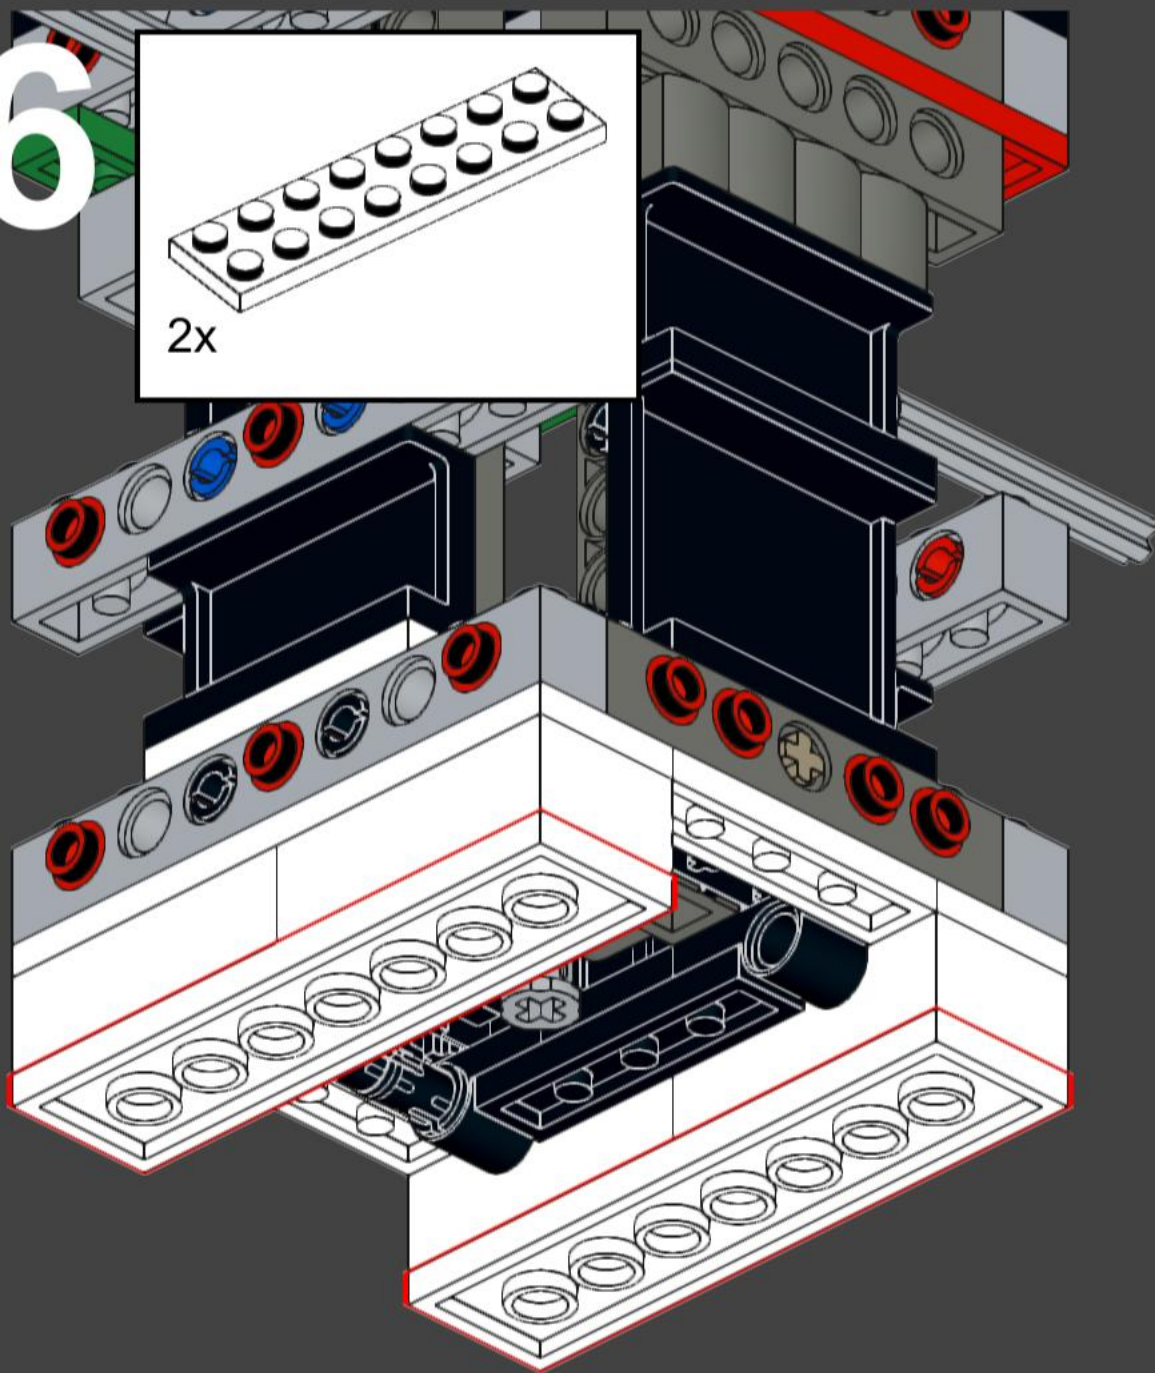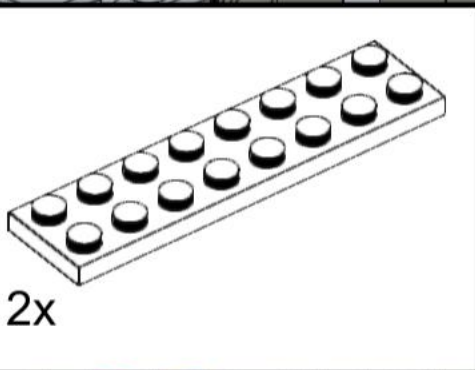


37

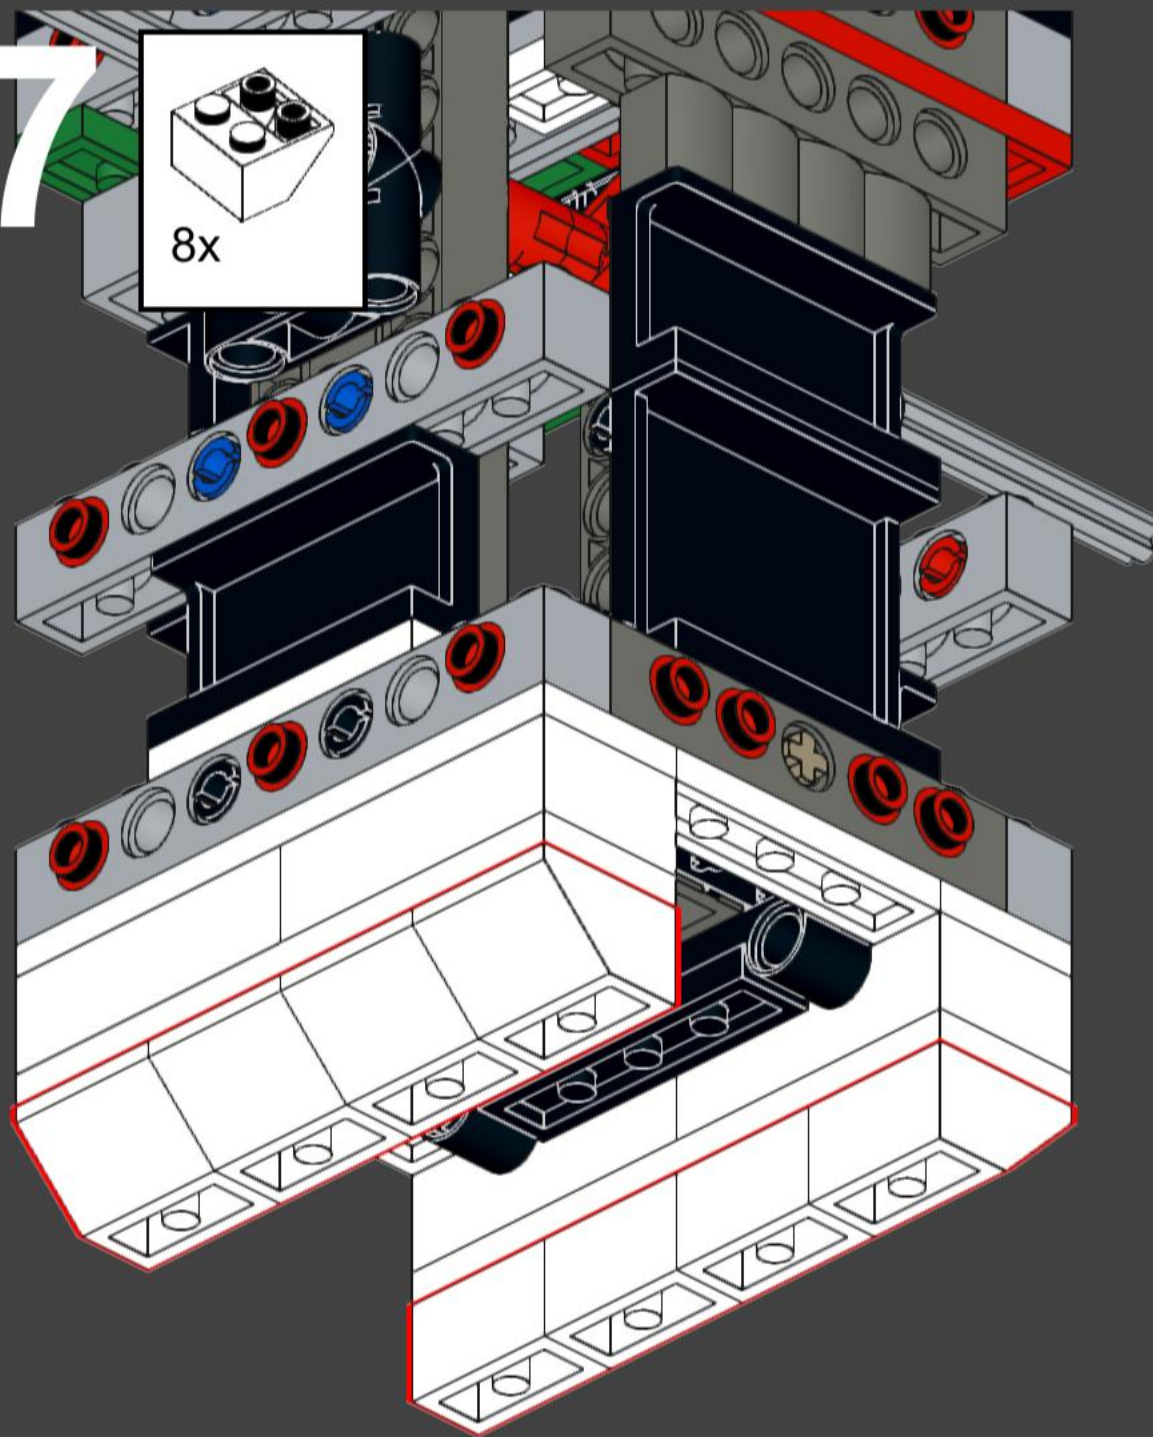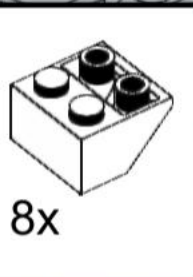





# 38


Remove the Bricks and Round Tile from the middle foot

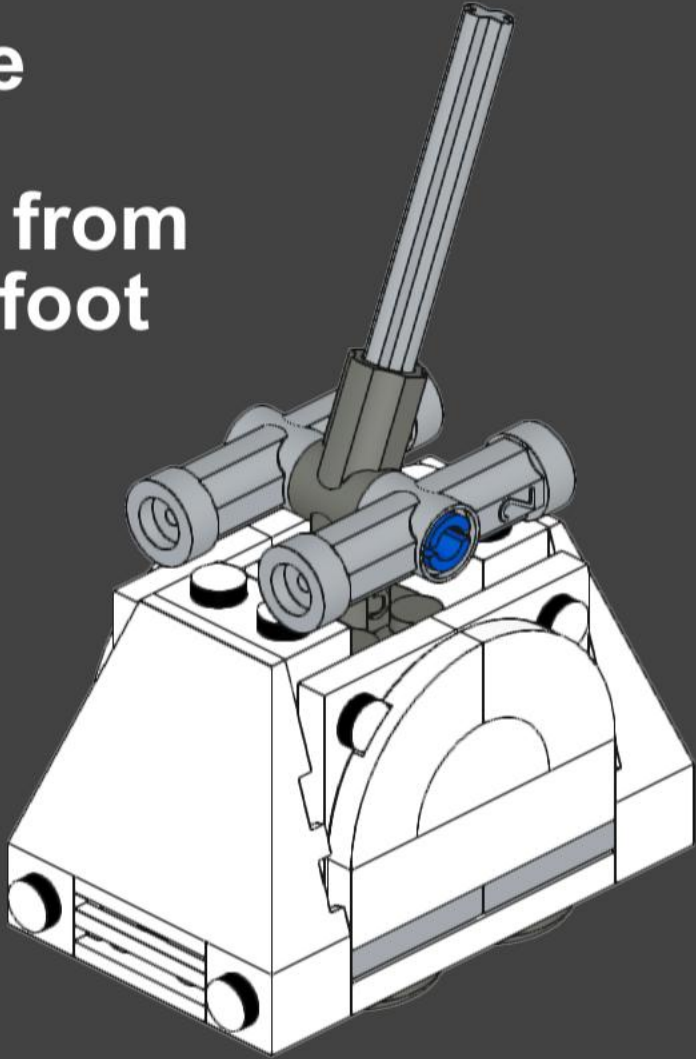

# 39

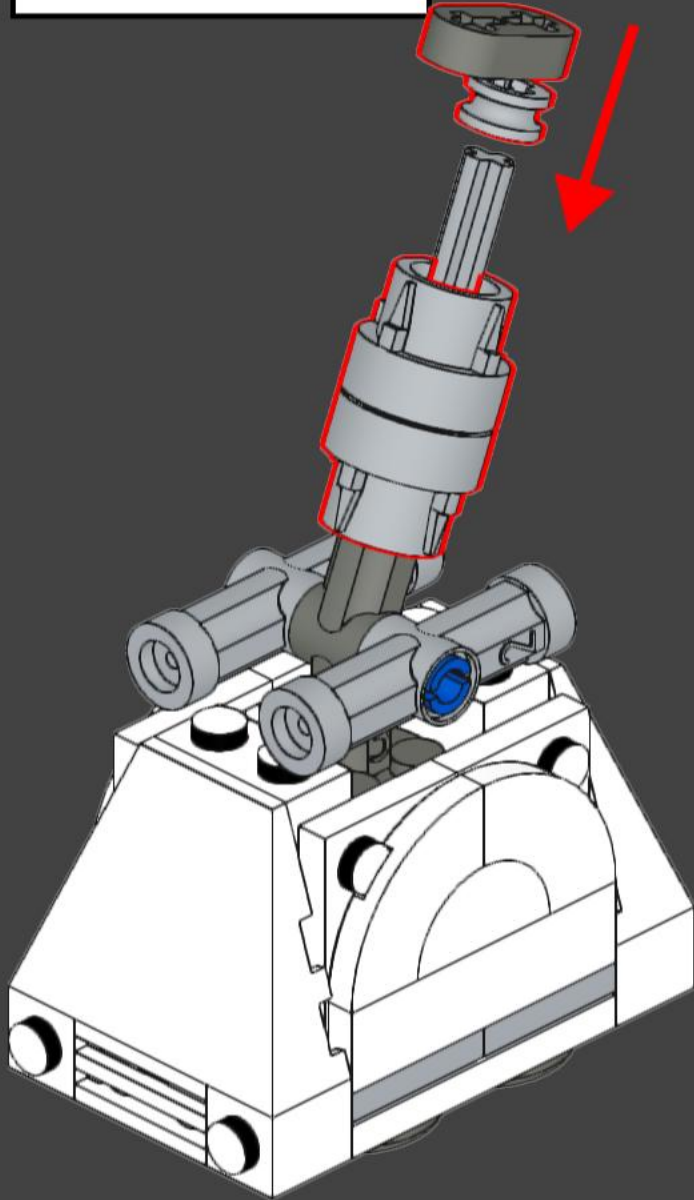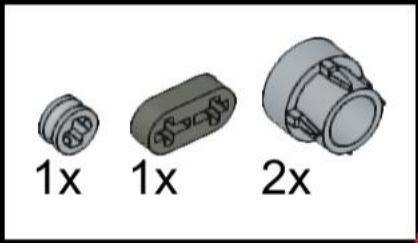


# 40

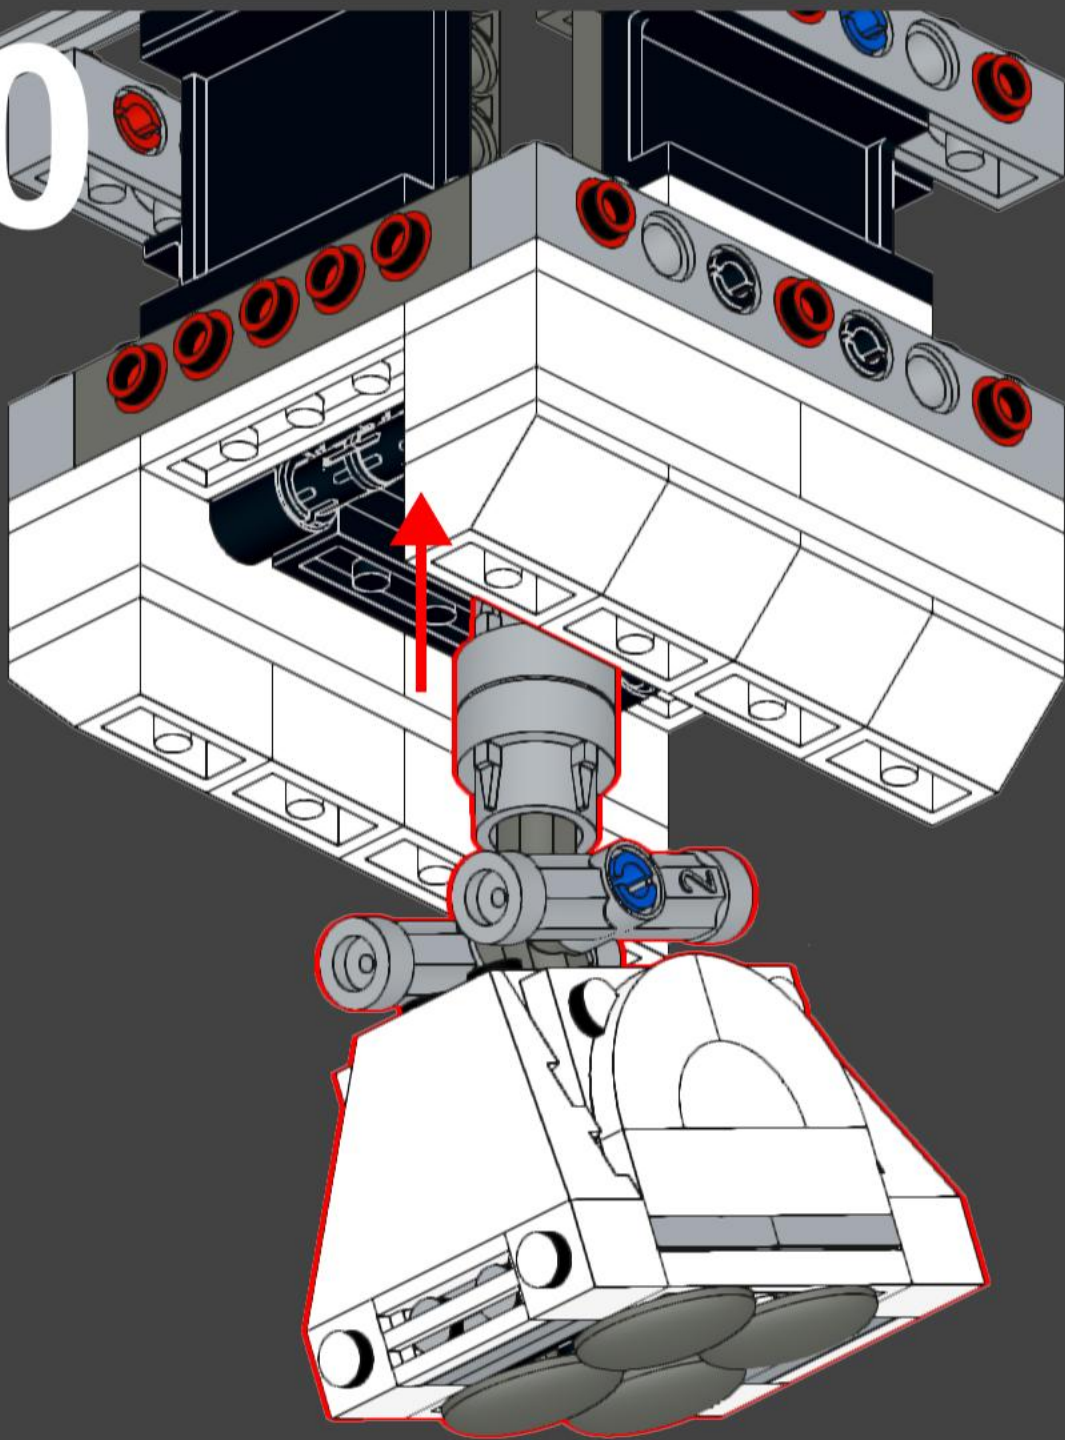

# 41

Add R2's  
head, legs  
and body  
panels

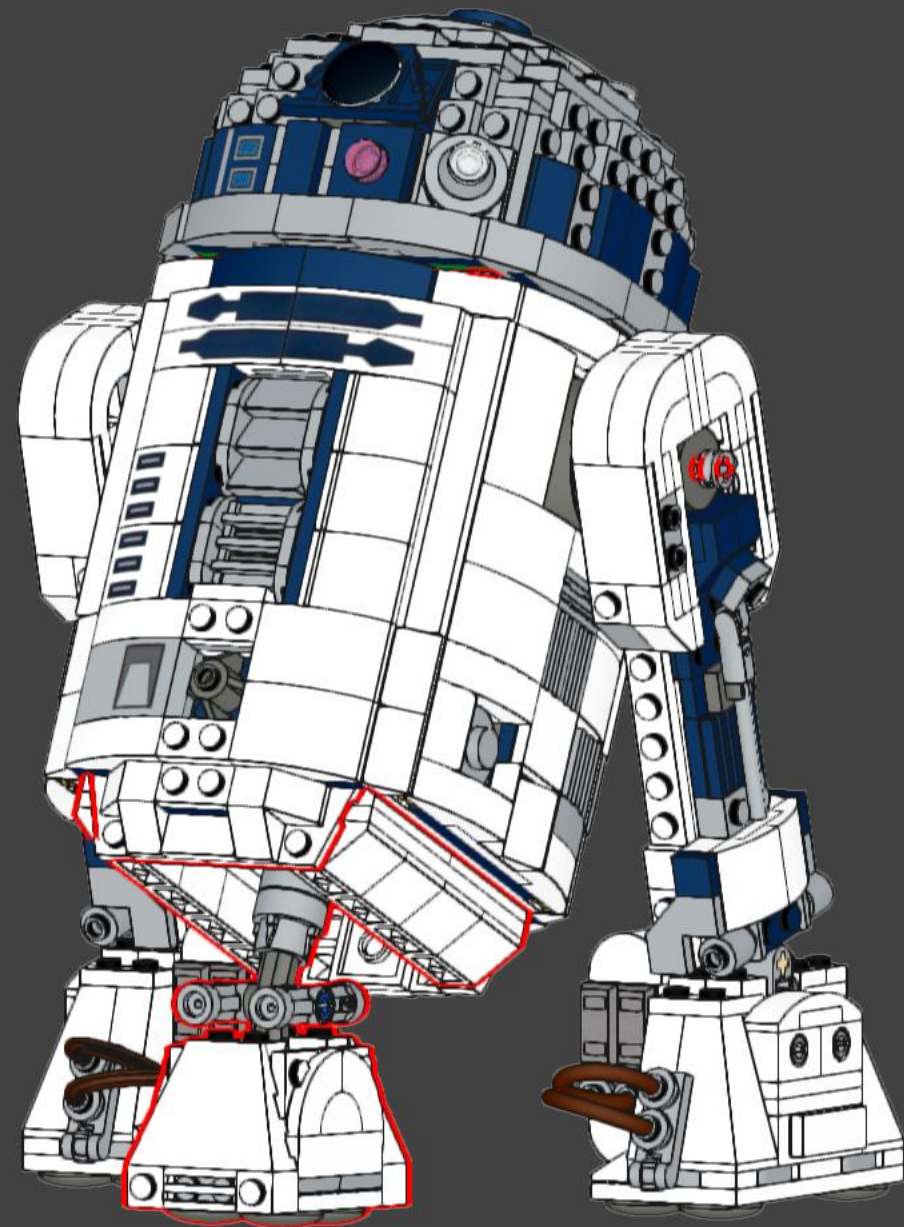





# 42

To hide R2's Middle Foot:


1. Slide it toward the front of the body (to release the Locking Pin), then push it up until it meets some resistance.

2. Rotate R2's body upright.

3. Push the Middle Foot up a little further to lock it in the top position (you'll hear the Locking Pin \*pop\*).

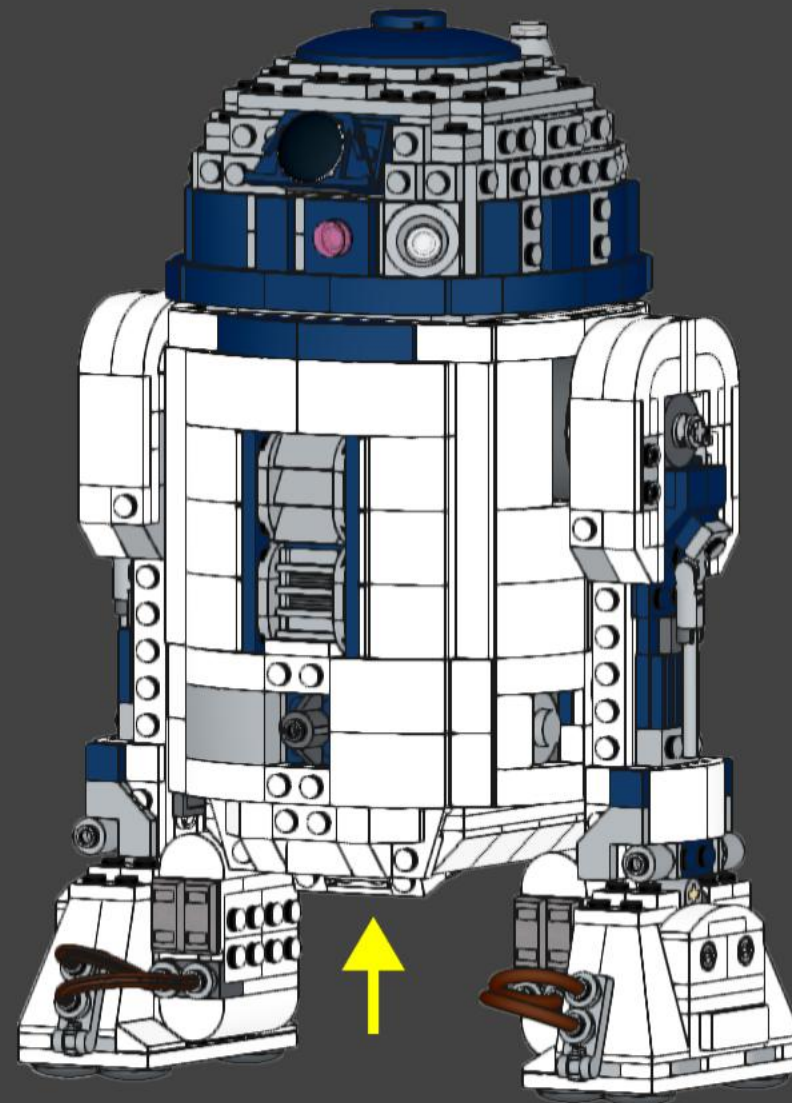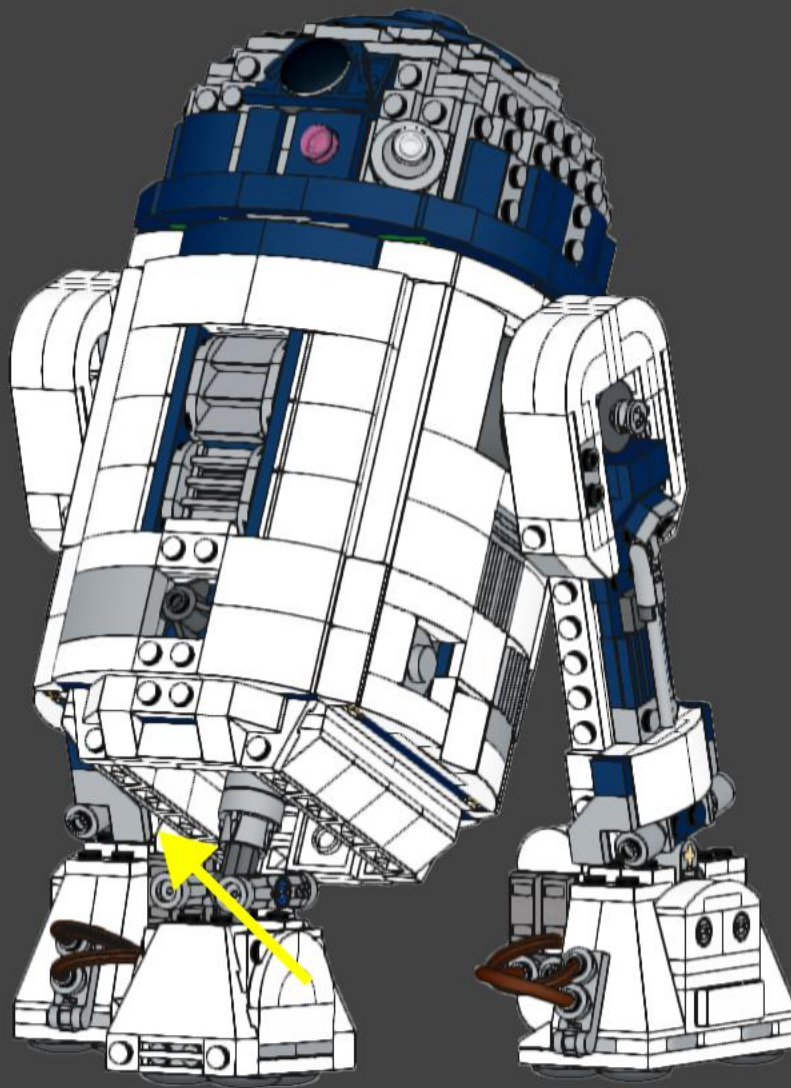


# 43

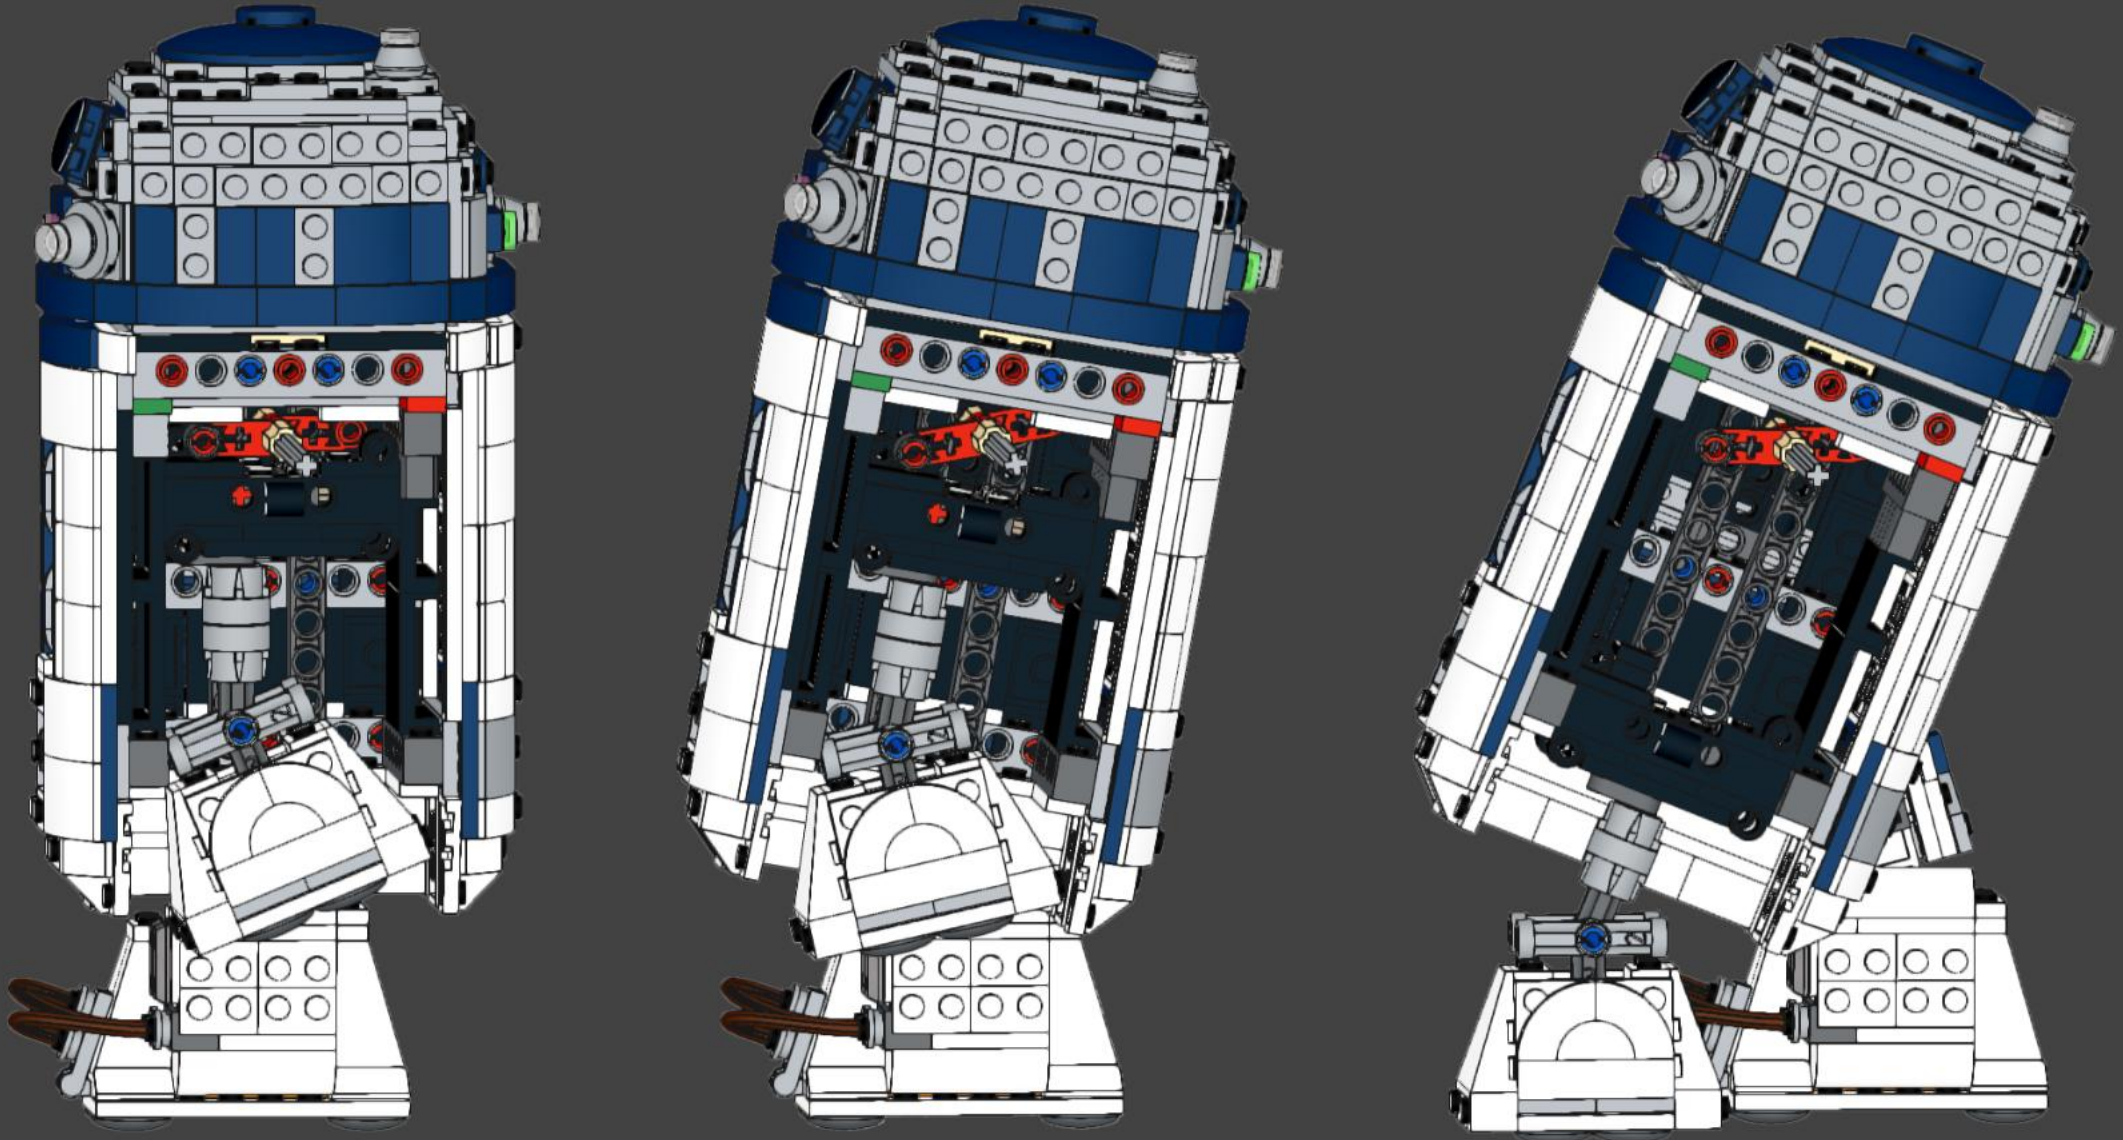

To lower R2's Middle Foot rotate his body backward to release the Locking Pin, pull the foot down until it locks in the lower position, then push R2 forward to rotate by the ankles.



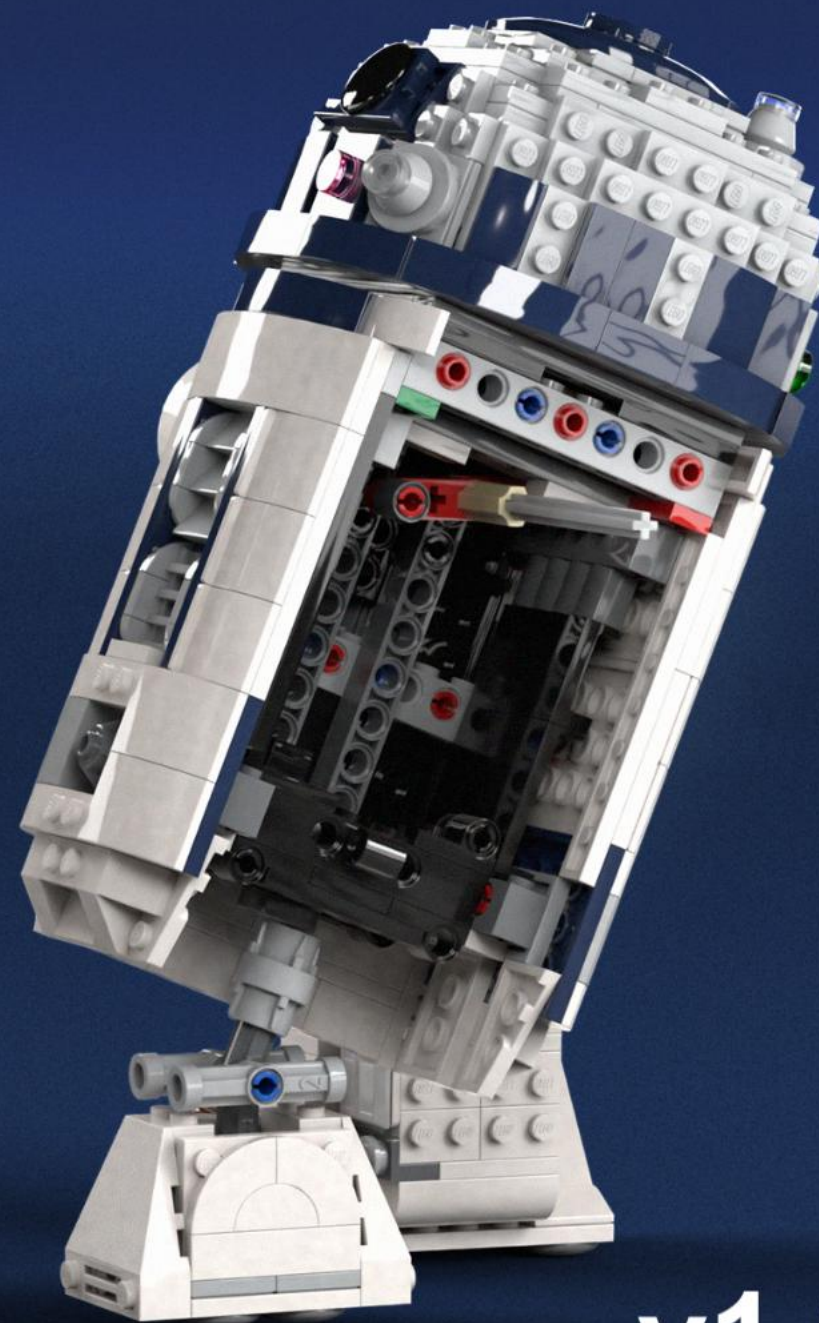

v1.0



**[brixpando.com](http://brixpando.com)**